MemTest86 User Manual

Version 11.2

Table of Contents

1 li	Introduction				
1.1	Memory Reliability	3			
1.2	MemTest86 Overview	3			
1.3	Compatibility	3			
1	1.3.1 UEFI	3			
2 S	Setup and Use	5			
2.1	Boot-disk Creation in Windows	6			
2.2	Boot-disk Creation in Linux	6			
2.3					
2.4					
2	2.4.1 Configuring a PXE Server on CentOS 7	8			
2	2.4.2 Configuring Serva for MemTest86 PXE Boot	9			
2.5	Using MemTest86	14			
2	2.5.1 Booting MemTest86 via USB	14			
2	2.5.2 Booting MemTest86 via Grub	14			
2	2.5.3 Booting MemTest86 via Network (PXE)	19			
2	2.5.4 Booting MemTest86 via Serial Console				
2	2.5.5 MemTest86 Splash Screen				
2	2.5.6 Main Menu				
	2.5.7 Configuration File (Pro version only)				
	2.5.8 Testing				
	2.5.9 Test Results/Reports				
	2.5.10 DIMM / DRAM chip error decoding (Pro & Site Edition only)				
	2.5.11 Troubleshooting MemTest86 Problems				
	Troubleshooting Memory Errors				
3.1	,				
3.2	` '				
3.3					
	Repairing Memory Faults				
4.1 4.2	č				
4.2	•				
4.4	,				
	Overclocking				
5.1	-				
5.2	•				
5.3					
	ndices				
	pendix A. Technical Information				
	pendix B. Product Support				
	pendix C. Change Log				
	pendix D. Acknowledgments				

1 Introduction

1.1 Memory Reliability

Properly functioning memory is critical for reliable operation of any computing device. Few users fully understand the risks associated with memory errors. Because devices typically do not have any mechanisms for detecting memory errors, confusing and potentially disastrous consequences can result from these undetected memory problems. Memory errors will often cause erratic behavior with software applications that can mysteriously fail. The most serious risk from memory errors, however, is corruption of data that manages how information is stored on disk. In most cases, this type of corruption will cause one or more files to be lost. There are cases where a memory error can cause the loss of the entire contents of your hard disk. Periodic testing of memory with a rigorous and thorough memory test will greatly reduce the risk of problems and data loss due to memory errors.

1.2 MemTest86 Overview

Memory errors are often pattern sensitive and may be very intermittent. Detecting these errors is technically challenging and is an imperfect science. MemTest86 uses advanced algorithms that have been refined for more than 20 years. These testing techniques are highly effective at detecting difficult to find memory errors. In addition, MemTest86 has the capability to test all available memory.

Memory testing programs execute from memory and therefore are not able to test the memory that is occupied by the test program itself. MemTest86, due to UEFI platform limitations, is unable to remap itself to different portions of memory in order to run tests in the section of memory it was occupying. The UEFI firmware itself also takes up some space compared to a traditional BIOS.

1.3 Compatibility

MemTest86 is designed to work with all processors using the Intel/AMD x86 and x86-64 architecture, as well as the ARM64 architecture, running on UEFI systems. Most newer systems are able to run the UEFI version of MemTest86.

MemTest86 is able to test all types of memory; there is no need for MemTest86 to know what type of memory it is testing. MemTest86 attempts to detect and display information about the hardware it is testing but this information is not used during testing.

Since MemTest86 is a standalone program, it does not require any operating system support for execution. It can be used with any PC regardless of what operating system, if any, is installed.

MemTest86 is multi-threaded and is able to concurrently use multiple cores to test memory. However, this may be limited by the UEFI firmware's underlying multi-core support.

1.3.1 UEFI

For UEFI systems, multi-core support is dependent on the multiprocessor services provided by the UEFI firmware. On older UEFI systems, multi-core support may not be fully functional, causing issues such as some

cores being unavailable for testing or in more severe cases, system halt when workaround, it is recommended that MemTest86 is run in single CPU mode o	

2 Setup and Use

MemTest86 supports booting from the UEFI platform. When booting from UEFI, MemTest86 has access to additional services not available in BIOS including:

- Native 64-bit support
- No longer requires the use of the PAE workaround to access more than 4GB of memory. (PAE = Physical Address Extension)
- Improved multi-threading support, where supported by the underlying UEFI system
- Option to disable CPU memory caching for all or individual tests
- Graphical interface with mouse input where supported by the underlying UEFI system
- Improved USB keyboard support, including systems that fail to emulate IO Port 64/60 correctly (eg. Mac USB keyboards)
- Reporting of configured RAM parameters including clock speed, timings, channel mode and voltages (limited to supported chipsets, ongoing development)
- Reporting of detailed RAM SPD information including timings, clock speeds, vendor names and much more
 - Support for DDR5/LPDDR5 RAM (and associated hardware), including retrieval and reporting of DDR5-specific SPD details. This includes DDR5 RAM that support Intel XMP 3.0 and AMD EXPO profiles.
- ECC error reporting (limited to supported chipsets, ongoing development)
 - Reporting of ECC capabilities and operation mode
 - Reporting of detected and corrected ECC errors
 - Injection of ECC errors for test purposes (limited hardware only)
- DIMM-level/chip-level error detection (limited to supported chipsets, ongoing development)
 - Per-module/per-chip error tracking and reporting
 - Results summarized in a simplified graphical display/HTML report
- Real-time CPU/DIMM temperature reporting
- · Real-time memory controller speed/timings reporting
- Support for storing logs and reports to disk/network. In all prior MemTest86 releases, there was no disk
 or network support.
- Support for network PXE boot for scalable, diskless deployment
- Full test automation via configuration file
- Secure Boot signed by Microsoft for ensuring software integrity

MemTest86 can boot from USB flash drive or, with Linux systems, by the boot loader (for example, LILO or Grub). Any Windows, Linux or Mac system may be used to create the USB flash drive. Once a MemTest86 boot disk has been created, it may be used on any x86 (PC) computer with a USB flash drive.

MemTest86 (Site Edition only) also supports diskless booting via PXE network boot. A DHCP/PXE server must be present on the network for PXE boot-enabled client machines to obtain the MemTest86 image via the network.

2.1 Boot-disk Creation in Windows

- 1. Download the MemTest86 USB image zip file.
- 2. Extract the contents of the zip file to a directory
- 3. Plug in the USB drive
- 4. Launch the ImageUSB application included in the zip file
- 5. Select your USB drive from the list (Step 1).
- 6. Select 'Write image to USB drive' (Step 2)
- 7. If it is not already selected, select the included image file (Step 3).
- 8. Click 'Write' (Step 4).
- 9. After accepting a few more prompts this should give you a working bootable USB drive

2.2 Boot-disk Creation in Linux

- 1. Download the MemTest86 USB image.
- 2. Unzip the package (unzip memtest86-usb.zip). An image file and a readme.txt file will be created in the current directory.
- 3. Plug in the USB drive
- 4. Determine which device the USB drive is assigned as (eg. /dev/sdc) by opening the Terminal and typing the following command:

```
lsblk -p -o NAME, VENDOR, MODEL, SIZE, TYPE, SERIAL
```

5. As root, use the 'dd' command to write the image to the USB drive. For example,

```
sudo dd if=memtest86-usb.img of=<dev> conv=fsync status=progress
```

where <dev> is the device the USB key is assigned to obtained from the previous command. Use the base device (ie. /dev/sdc) not a partition designation (ie. /dev/sdc1).

Warning All data on the USB key will be lost. Make sure that the device used in the dd command above is correct.

2.3 Boot-disk Creation in Mac

- 1. Download the MemTest86 USB image.
- 2. Unzip the package (unzip memtest86-usb.zip). An image file and a readme.txt file will be created in the current directory.
- 3. Plug in the USB drive
- 4. Determine which device the USB drive is assigned as by opening the Terminal and typing the following command:

diskutil list

5. Unmount all volumes on the USB drive by typing the following command:

```
diskutil unmountDisk [device name]
```

6. As root, use the 'dd' command to write the image to the USB drive. For example,

```
sudo dd if=memtest86-usb.img of=<dev> conv=sync
```

where <dev> is the device the USB key is assigned to obtained from the previous command. Use the base device (ie. /dev/disk1) not a partition designation (ie. /dev/disk1s1).

Warning All data on the USB key will be lost. Make sure that the device used in the dd command above is correct.

2.4 Setting up Network (PXE) Boot

MemTest86 (Site Edition only) supports network booting via PXE. In order to configure PXE booting of MemTest86, a DHCP/PXE server must be present on the network which hosts the MemTest86 boot images to PXE boot-enabled client machines. Network booting of MemTest86 has been tested successfully with the Linux-based CentOS (DHCP + TFTP server) and Windows-based Serva PXE Server but other PXE servers should work as well. For step-by-step instructions, see Configuring a PXE Server on CentOS 7 or Configuring Serva for MemTest86 PXE Boot. For others, see the manual for your DHCP/PXE server for configuration instructions.

Once the PXE server is configured, extract the files from the MemTest86 Site Edition package to the appropriate directory for your PXE server configuration. In the PXE server settings, specify the boot image file to "BOOTX64.efi" for x86-64 clients, "BOOTIA32.efi" for x86 clients, and "BOOTAA64.efi" for ARM64 clients.

The configuration file (mt86.cfg) is supported in PXE boot and can be used to configure and customize MemTest86. Likewise, report files are supported and can be uploaded to the PXE/TFTP server. Currently, logs can only be saved on a local disk.

2.4.1 Configuring a PXE Server on CentOS 7

Any Linux distribution that includes TFTP and DHCP server software packages can be configured as a PXE server. This has been tested successfully on CentOS 7 but other mainstream Linux distributions can be configured as PXE servers as well. Please consult the documentation for those distributions for setup instructions.

- 1. Open a terminal session
- 2. Install the TFTP server by entering the following:

```
yum install tftp-server xinetd
```

3. Configure TFTP server by editing /etc/xinetd.d/tftp. In particular, ensure 'disable' is set to 'no' and server_args is set appropriately (ie. includes a path to your TFTP server root directory and specifies a remap file for fixing paths with backslashes).

```
service tftp
{
  socket_type = dgram
  protocol = udp
  wait = yes
  user = root
  server = /usr/sbin/in.tftpd
  server_args = -c -s -m /var/lib/tftpboot/tftp.remap /var/lib/tftpboot
  disable = no
  per_source = 11
  cps = 100 2
  flags = IPv4
}
```

4. Create the TFTP server root directory. In the following example, the TFTP root directory is /var/lib/tftpboot

```
mkdir -p /var/lib/tftpboot
```

5. Extract MemTest86 Site Edition files to the TFTP server root directory. Ensure read/write permissions are properly set.

```
unzip memtest86-site.tar.gz -d /var/lib/tftpboot
chmod -R 777 /var/lib/tftpboot
```

6. Install DHCP server by entering the following:

```
yum install dhcp
```

7. Configure the DHCP server by editing /etc/dhcpd.conf. In the following example, the the DHCP server shall provision IP addresses to a local network with subnet 192.168.100.0/24. The DHCP server is connected to this network via interface eth0 which is assigned a static IP address of 192.168.100.1

```
option arch code 93 = unsigned integer 16; # RFC4578
allow booting;
allow bootp;
subnet 192.168.100.0 netmask 255.255.255.0 {
  interface eth0;
  range dynamic-bootp 192.168.100.100 192.168.100.254;
  option broadcast-address 192.168.100.255;
  option routers 192.168.100.1;
   class "pxeclients" {
      match if substring (option vendor-class-identifier, 0,9) = "PXEClient";
      next-server 192.168.100.1;
                                       # x86-64 EFI BOOT
      if option arch = 00:09 {
         filename "BOOTX64.efi";
      else if option arch = 00:07 {
                                       # x86-64 EFI BOOT
        filename "BOOTX64.efi";
      else if option arch = 00:06 {
                                      # x86 EFI BOOT
        filename "BOOTX32.efi";
      else if option arch = 00:0b {
                                        # ARM64 EFI BOOT
        filename "BOOTAA64.efi";
      else {
                                        # legacy BIOS boot
         filename "pxelinux.0";
```

8. Start the TFTP and DHCP servers

```
service xinetd start
service tftp start
service dhcpd start
```

2.4.2 Configuring Serva for MemTest86 PXE Boot

Serva is a lightweight but powerful Windows PXE server that bundles all required services (eg. DHCP, TFTP) in order to support UEFI-based booting. Serva does not require installation and can be setup in minutes.


Note: MemTest86 PXE Boot has been tested to work with Serva v3.0.0. There have been reports of issues with uploaded files being truncated to 512 bytes with Serva v3.2.0. Please use v3.0.0 until the issue has been resolved.

To enable PXE booting of MemTest86, Serva can be configured in one of two ways: *Single-Image Boot* (for booting MemTest86 only) or *Automated Multi-Image Boot* (for configuring multiple boot targets).


2.4.2.1 Single-Image Boot

Configuring Serva for Single-Image Boot is ideal for servers that require only a simple setup and do not need to distribute software images other than MemTest86. All necessary settings are configured within the Serva application and do not require any additional configuration files.

- 1. Open Serva and select 'Settings'
- 2. Click on the TFTP tab to setup the TFTP server
 - a) Ensure that 'TFTP Server' is checked
 - b) Specify the TFTP root directory. This should be the location where the MemTest86 files are to be extracted.
 - c) Set the TFTP Security to 'Standard' to allow MemTes86 report files to be uploaded to the server

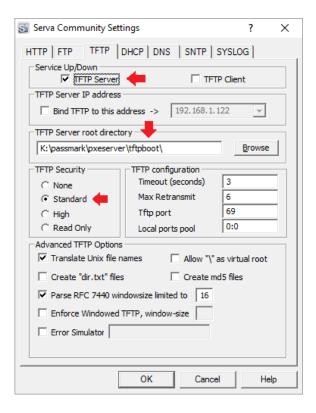

- 3. Click on the DHCP tab to setup the DHCP server
 - a) If your network already has a DHCP server, check 'proxyDHCP'. Otherwise, check 'DHCP Server'.
 - b) If 'DHCP Server' is selected, specify the 'IP Pool 1st Addr', 'Pool size' and 'Subnet Mask' for the DHCP server.
 - c) Specify the 'Boot File' to be retrieved by the client. For x86 clients (most systems), enter 'BOOTX64.efi' (64-bit) OR 'BOOTIA32.efi' (32-bit) as the boot file. For ARM64 clients, enter 'BOOTAA64.efi'.

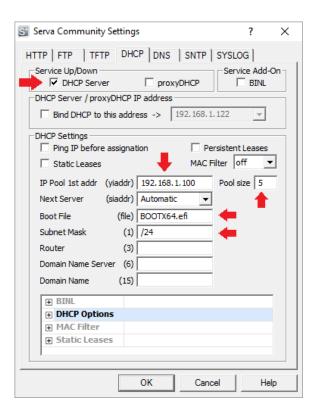


- 4. Press OK to save the settings.
- 5. Extract all files in the MemTest86 package in the folder specified in Step 2b.
- 6. Close and restart Serva to apply the settings.


2.4.2.2 Automated Multi-Image Boot

Configuring Serva for Automated Multi-Image Boot is ideal for servers that distribute more than one boot image to PXE clients. Instead of booting the MemTest86 image directly, the client machine is given a menu of boot images to choose from. This configuration offers the convenience and flexibility of managing multiple boot images with minimal overhead.

- 1. Open Serva and select 'Settings'
- 2. Click on the TFTP tab to setup the TFTP server
 - a) Ensure that 'TFTP Server' is checked
 - b) Specify the TFTP root directory. This should be the root directory of where all boot images are stored.

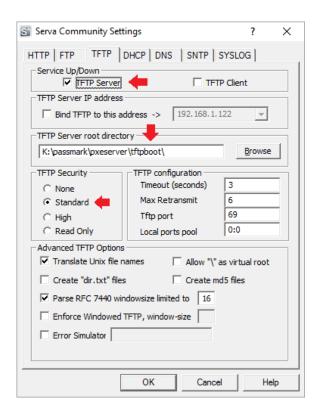

- c) Set the TFTP Security to 'Standard' to allow MemTes86 report files to be uploaded to the server
- 3. Click on the DHCP tab to setup the DHCP server
 - a) If your network already has a DHCP server, check 'proxyDHCP'. Otherwise, check 'DHCP Server'.
 - b) If 'DHCP Server' is checked, specify the 'IP Pool 1st Addr', 'Pool size' and 'Subnet Mask' for the DHCP server.
 - c) Check 'BINL' to enable automated management of boot images

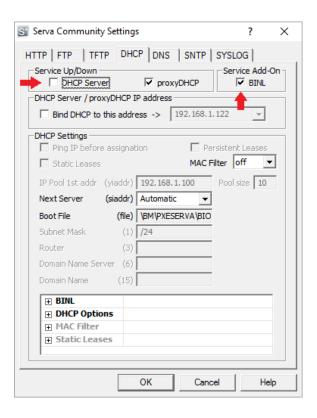

- 4. Press OK to save the settings. Close and restart Serva to apply the settings.
- 5. After restarting Serva, a directory structure of several folders should have been created in the TFTP root directory specified in Step 2b. Open the 'NWA_PXE' folder and create a new directory to hold the MemTest86 files (eg. 'MEMTEST86').
- 6. Extract all files in the MemTest86 package to the directory created in Step 5.
- 7. Verify 'ServaAsset.inf' exists in the directory. If not, create and paste the following configuration text in the file. For more details on the configuration parameters, consult the Serva manual.

```
[PXESERVA_MENU_ENTRY]
asset = MemTest86
platform = x86

kernel_efi64 = \NWA_PXE\$HEAD_DIR$\BOOTX64.EFI
append_efi64 = TFTPROOT=\NWA_PXE\$HEAD_DIR$
kernel_efi32 = \NWA_PXE\$HEAD_DIR$\BOOTIA32.EFI
append_efi32 = TFTPROOT=\NWA_PXE\$HEAD_DIR$
```

8. Close and restart Serva to apply the settings.

2.5 Using MemTest86

2.5.1 Booting MemTest86 via USB

To start MemTest86 insert the USB flash drive into the appropriate slot and restart your computer.

Note: The UEFI BIOS must be configured to boot from the device that MemTest86 is installed on. Most systems have an optional boot menu that is enabled by pressing a key at startup (often ESC, F9, F11 or F12). If available, use the boot menu to select the correct drive. Please consult your motherboard documentation for details.

It may also be possible to boot using USB card reader devices, although compatibility depends on the device itself and/or motherboard. For optimal compatibility, please use the USB drives implementing the fastest available standard (eg. USB 3.1) from reputable vendors.

On a Mac, to boot from USB, you need to hold down the ALT / Option key on the Mac keyboard while powering on the machine.

On newer Macs (from 2018) with the Apple T2 Security Chip, you may need to change the SecureBoot settings for MemTest86 to boot. Please see the following page for instructions:

https://support.apple.com/en-us/HT208330

All MemTest86 images support booting only in UEFI mode. If your system is unable to boot MemTest86, it is most likely that either:

- 1. You have an older system that does not support UEFI
- 2. Your system supports UEFI but is configured in legacy mode (ie. BIOS)

If (1) is true, your system will not be able to boot MemTest86. You will need to upgrade to a new system that supports UEFI in order to run MemTest86.

If (2) is true, you will need to go to the BIOS setup and change the necessary settings in order to boot from UEFI. The actual BIOS setting varies depending on the vendor but it is typically "Legacy Boot", "CSM" or "Compatibility Support Module".

2.5.2 Booting MemTest86 via Grub

Grub is a popular boot loader that many popular Linux distributions come pre-packaged with, such as Ubuntu LTS. In our instance, Grub can be used to chainload MemTest86, directly from a local boot disk/partition on the system.

The following guide provides users with step-by-step instructions on how to configure and use Memtest86 x64 with Grub v2.04 running under Ubuntu 20.04 LTS 64-bit. Please note that the same steps will likely work with other Linux distributions, however this is the only configuration that has been tested and thus cannot guarantee compatibility or provide support for other configurations (e.g. different Linux distros, older Grub

versions etc.) The guide assumes that the user is familiar with Linux operating systems and terminal commands.

2.5.2.1 Pre-requisite: enabling Grub menu during boot

On some Linux distributions such as Ubuntu 20.04 LTS, the Grub boot menu is hidden by default, and skipped during the boot process. As such, Grub needs to be configured to permanently display its menu, by performing the following steps:

1. Open the file /etc/default/grub with a text editor, you will see the following contents

```
If you change this file, run 'update-grub' afterwards to update
# /boot/grub/grub.cfg.
# For full documentation of the options in this file, see:
   info -f grub -n 'Simple configuration'
GRUB DEFAULT=0
GRUB TIMEOUT STYLE=hidden
GRUB TIMEOUT=0
GRUB_DISTRIBUTOR=`lsb_release -i -s 2> /dev/null || echo Debian`
GRUB CMDLINE LINUX DEFAULT="quiet splash"
GRUB CMDLINE LINUX="
# Uncomment to enable BadRAM filtering, modify to suit your needs
# This works with Linux (no patch required) and with any kernel that obtains
# the memory map information from GRUB (GNU Mach, kernel of FreeBSD ...)
#GRUB_BADRAM="0x01234567,0xfefefefe,0x89abcdef,0xefefefef"
# Uncomment to disable graphical terminal (grub-pc only)
#GRUB_TERMINAL=console
# The resolution used on graphical terminal
# note that you can use only modes which your graphic card supports via VBE
# you can see them in real GRUB with the command `vbeinfo'
```

2. Change the following two lines and save, close the file:

```
GRUB_TIMEOUT_STYLE=menu
GRUB_TIMEOUT=10
```

3. Update the grub configuration by running the command below:

```
sudo update-grub
```

2.5.2.2 Setup MemTest86 for Grub boot

1. Create a boot image from the MemTest86 USB zip file:

Download the MemTest86 USB zip file available from the PassMark website. Unzip it within its current directory, and then use the built-in fdisk utility to analyze the partition structure and determine the correct mount point:

```
user@user-H87-D3H:~/Downloads/memtest86-usb$ fdisk -lu memtest86-usb.img
Disk memtest86-usb.img: 500 MiB, 524288000 bytes, 1024000 sectors
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disklabel type: qpt
Disk identifier: 896EC22C-0661-44FD-8DFA-2A00CE9BDC67
Device
                    Start
                              End Sectors
                                           Size Type
memtest86-usb.img1
                     2048 512000
                                   509953
                                           249M Microsoft basic data
memtest86-usb.img2 514048 1023966
                                   509919
                                           249M EFI System
user@user-H87-D3H:~/Downloads/memtest86-usb$
```

In the screenshot above, the file that needs to be mounted is the memtest86-usb.img2 file, which contains the EFI boot image. As such, this file is extracted and mounted to a temporary location/folder, using the below series of commands.

Create a temporary directory using the following command:

```
user@user-H87-D3H:~$ mkdir ~/Downloads/memtest-temp
```

Next, mount the image file to the temporary directory chosen earlier, by calculating the correct mount offset (obtained by multiplying the start – 514048 by 512, the size of each sector, resulting in 263192576):

```
user@user-H87-D3H:~$ sudo mount -o loop,offset=263192576 ~/Downloads/memtest86-u
sb/memtest86-usb.img ~/Downloads/memtest-temp/
```

2. Copy the boot image from the temporary drive to the system EFI partition:

In order to perform this, first locate and confirm the EFI boot drive partition for your local system. This can be performed by running the df command, and observing the output:

```
user@user-H87-D3H:-$ df
Filesystem
               1K-blocks
                             Used Available Use% Mounted on
udev
                                    8109316
                                              0% /dev
                 8109316
                                0
tmpfs
                             1712
                                    1625988
                                              1% /run
                 1627700
/dev/sda2
               459924552 9625780 426866120
                                              3% /
tmpfs
                 8138488
                                0
                                    8138488
                                              0% /dev/shm
tmpfs
                                       5116
                                              1% /run/lock
                    5120
                                4
                                                  /sys/fs/cgroup
tmpfs
                 8138488
                               0
                                    8138488
                                              0%
/dev/loop1
                   56832
                            56832
                                          0 100% /snap/core18/1944
/dev/loop3
                   63616
                            63616
                                          0 100% /snap/gtk-common-themes/1506
/dev/loop2
                   66432
                            66432
                                          0 100% /snap/gtk-common-themes/1514
/dev/loop4
                  261760
                          261760
                                          0 100% /snap/gnome-3-34-1804/36
/dev/loop6
                   30720
                            30720
                                          0 100% /snap/snapd/8542
/dev/loop5
                   52352
                            52352
                                          0 100% /snap/snap-store/518
/dev/loop7
                  224256
                          224256
                                          0 100% /snap/gnome-3-34-1804/66
/dev/loop8
                   51072
                            51072
                                          0 100% /snap/snap-store/467
/dev/loop9
                            31872
                                          0 100% /snap/snapd/10707
                   31872
                                              2% /boot/efi
/dev/sda1
                  523248
                             7988
                                     515260
/dev/loop10
                   56832
                            56832
                                          0 100% /snap/core18/1988
                 1627696
                               36
                                    1627660
                                              1% /run/user/1000
tmofs
/dev/sdb1
                  254704
                             6596
                                     248108
                                              3% /media/user/E64D-861B
/dev/loop0
                  254684
                             6584
                                     248100
                                              3% /home/user/Downloads/memtest-tem
```

On this particular system, the EFI boot partition (/boot/efi) is stored under /dev/sda1.

Take note of this directory as it directly corresponds to the disk number, and boot partition the EFI file system is on, this information will be needed in subsequent steps. In this particular example:

```
/dev/sdxy
```

where x corresponds to the disk number. a = disk 0, b = disk 1, etc. where y corresponds to the partition number. 1 = partition 1, 2 = partition 2, etc.

Now, copy the locally created /EFI/BOOT directory to your system's EFI boot directory using the following command:

```
user@user-H87-D3H:~$ sudo cp -r ~/Downloads/memtest-temp/EFI/B00T/ /boot/efi/EFI
/memtest86
```

a. For NVMe drives:

If the EFI boot partition is on a NVMe drive, the above steps will not display the correct partition. Instead, the following steps are required to get the correct disk and partition:

- 1) Press "c" on the grub menu to get a command line
- 2) Enter "Is" to get a list of all the drives. The drive/partitions are all listed as (hd#,gpt#), regardless of what they are physically. Then list the root using "Is (hd#,gpt#)/", for each drive until you find the EFI boot partition.
- 3. Modify the Grub config to add a MemTest86 boot option:

Navigate to the grub config file directory. Below are the contents of the directory on a fresh Ubuntu installation. In our case we will be editing the 40_custom file. This file is a template that you can use to create additional entries to be added to the boot menu.

```
user@user-H87-D3H:/etc/grub.d$ ls -l
total 136
-rwxr-xr-x 1 root root 10627 Jul 31 2020 00 header
                                     2020 05 debian theme
-rwxr-xr-x 1 root root 6258 Jul 21
-rwxr-xr-x 1 root root 17622 Jan 14 01:12 10 linux
-rwxr-xr-x 1 root root 42359 Jan 14 01:12 10 linux zfs
-rwxr-xr-x 1 root root 12894 Jul 31
                                     2020 20 linux xen
rwxr-xr-x 1 root root 1992 Feb 14
                                     2020 20 memtest86+
-rwxr-xr-x 1 root root 12059 Jul 31
                                     2020 30 os-prober
                                     2020 30 uefi-firmware
-rwxr-xr-x 1 root root 1424 Jul 31
                         214 Jul 31
                                     2020 40 custom
-rwxr-xr-x 1 root root
-rwxr-xr-x 1 root root
                        216 Jul 31
                                     2020 41 custom
-rwxr-xr-x 1 root root
                        331 Feb
                                  8 11:22 42 custom
-rw-r--r-- 1 root root 483 Jul 31 2020 README
```

Open the file in a text editor (with sudo privileges) and add the following text:

Pay attention to the following line:

```
set root = 'hd0, qpt1'
```

Based on your specific environment, edit this line as follows:

```
hd(x); where (x) = disk number identified in Step 2. gpt(x); where (x) = partition number identified in Step 2.
```

Save and close the file.

Finally run the below command to update your grub config, and then reboot your system.


```
sudo update-grub
```

```
user@user-H87-D3H:/etc/grub.d$ sudo update-grub
Sourcing file `/etc/default/grub'
Sourcing file `/etc/default/grub.d/init-select.cfg'
Generating grub configuration file ...
Found linux image: /boot/vmlinuz-5.8.0-41-generic
Found initrd image: /boot/initrd.img-5.8.0-41-generic
Found linux image: /boot/vmlinuz-5.4.0-42-generic
Found initrd image: /boot/initrd.img-5.4.0-42-generic
Adding boot menu entry for UEFI Firmware Settings
done
```

Assuming the above steps were successfully performed, the grub bootloader menu should now appear, and display MemTest86 as an option.

2.5.3 Booting MemTest86 via Network (PXE)

After configuring the PXE Server for MemTest86 deployment, the client machine must also be configured to boot from network (PXE). In the BIOS setup, ensure that the "UEFI Network Stack" and "IPv4 PXE Support' features are enabled, similar to the screenshot below.

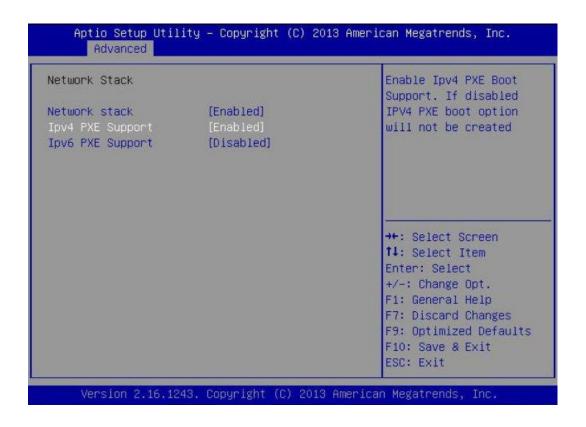

Once PXE support is enabled, ensure that the network PXE boot option is in the appropriate boot order.


Most systems also have an optional boot menu that is enabled by pressing a key at startup (often ESC, F9, F11 or F12). If available, use the boot menu to select the network PXE boot option. Please consult your motherboard documentation for details.

2.5.4 Booting MemTest86 via Serial Console

For systems without video support, MemTest86 can run in serial console mode from both UEFI and BIOS systems. For MemTest86 v4, select option 5 from the menu to enable output to serial console. You will not need to do anything for MemTest86 v5 or later as it will automatically use the serial console, provided that the UEFI BIOS has been configured to redirect the console to the serial port. No GUI support is available when using the serial console so all test configurations must be done using the configuration file.

2.5.5 MemTest86 Splash Screen

When MemTest86 boots, a splash screen is displayed with a 10 second countdown timer which when expires, automatically starts the memory tests with default settings. Pressing a key or moving the mouse shall stop the timer.

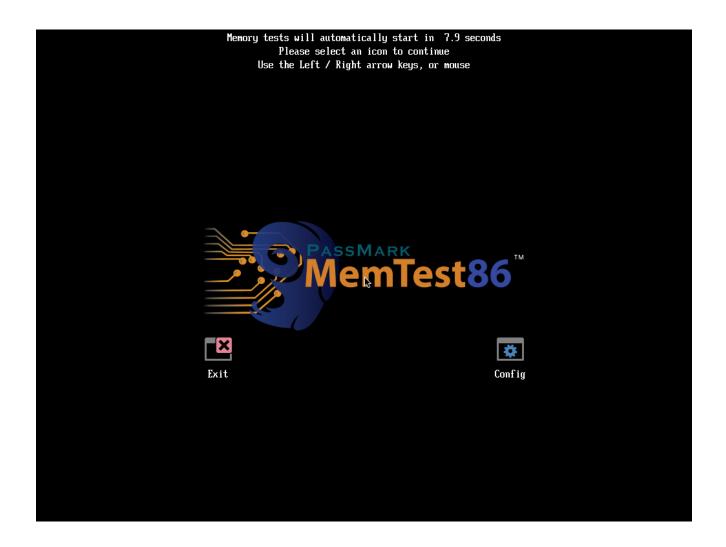

Selecting **Exit** shall allow the user to reboot, shutdown or exit MemTest86. To configure the memory tests, select **Config** and the main menu is displayed. The main menu allows the user to customize the memory test settings such as the specific tests to execute, address range to test and which CPU core(s) are used in testing.

2.5.6 Main Menu

The Main Menu provides a graphical interface for configuring memory test parameters, as well as displaying information about the system.

A screenshot can be taken and saved to file at any time by pressing F12.

2.5.6.1 System Info

The System Info screen displays the hardware information of the system it is running on, including the following:

- CPU information, including clock speed, cache information and number of cores
- Memory information, including the total physical memory, RAM configuration and ECC mode



View detailed RAM (SPD) info - displays the SPD information stored in the individual RAM modules. The RAM SPD information can be saved to a file on disk *(Pro version only)*

Note: Retrieving RAM SPD information is highly dependent on the system's motherboard/CPU chipset. Most common hardware should be supported but for some systems, accessing the SPD modules using the mechanism required by the chipset may not be supported. If this is the case, please send the MemTest86.log file to help@passmark.com, along with details of your system. The log file will be analyzed to determine whether the chipset can be supported in future versions.

View memory usage - displays the system memory address map.

ECC polling: Enabled/Disabled - if ECC detection/correction is supported and enabled, this option disables/enables periodic checking of any ECC errors that have been detected by the system while the memory tests are running.

ECC injection: Enabled/Disabled (*Pro version only*) - if ECC detection/correction is supported/enabled and ECC injection is supported by the system, this option enables/disables injection of ECC errors to simulate how the system responds to real ECC errors. ECC errors are injected at the start of each individual test. If ECC injection is successful, the details of the ECC error shall be reported and displayed on screen as if an actual ECC error was detected.

Note: Although ECC injection may be supported by your hardware, it may be locked by the BIOS. Some BIOS may allow you to unlock the ECC injection feature in the BIOS setup. In some cases, however, you may need a modified BIOS which does not lock the ECC injection feature.

Memory caching: (*Pro version only*) - The memory caching policy to use when reading and writing to memory. By default, caching is enabled to optimize system performance due to faster access speeds to the caching hardware. However, this results in reduced load to the physical RAM which may not be ideal for RAM stress testing.

Note: Disabling cache will result in greater load on the RAM modules but will significantly increase the test completion time. For most modern systems with large amounts of RAM, it will typically take more than 24 hours to complete a test.

Save system information summary to file (Pro version only) - Save the system information to a file on disk

2.5.6.2 Test Selection

The Test Selection screen allows the user to select the test sequence to run, and the number of passes to run each sequence. See *Individual Test Descriptions* for a detailed description of each test.



To enable/disable a test, use the up / down arrow keys or mouse to highlight a test, then press enter or click. Test 11 and 12 are available only in the Pro version.

To change the number of passes, select **Number of passes** and enter the desired number of passes. This can be a number up to the maximum value of 999 in the Pro version, or 4 in the Free version.

2.5.6.3 Address Range

The Address Range screen allows the user to specify a subset of the total system address map to test.



To change the lower or upper limit of the address range to test, select the appropriate setting and enter a new value.

To enter a decimal address, enter the address as is.

To enter a hexadecimal address, enter **0x** followed by the hex address.

You may also use the suffixes **k**, **m**, **g** to specify kilobyte, megabytes and gigabytes respectively.


Selecting **Reset Limits to default** will reset the limits to its maximum values.

2.5.6.4 CPU Selection

The CPU Selection screen allows the user to specify a single CPU core to test, or cycle through all logical CPU cores using a selection mode.

In the Free version, the maximum number of logical CPU cores supported in MemTest86 is 16.

In the Pro version, the maximum number of logical CPU cores supported in MemTest86 is 256 but can be increased to 512 using the MAXCPUS configuration file parameter.

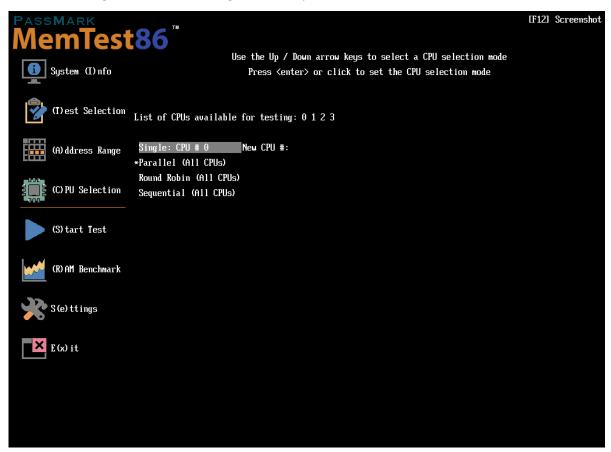

Single - specifies a single CPU core to test, and prompts the user to enter a valid CPU ID number

Parallel - executes the memory tests on all physical (ie. non-logical) CPU cores concurrently, on a set of non-overlapping memory segments. Memory segments are allocated consecutively to CPU core numbers in alternating ascending and descending order for each pass.

Round Robin - only one CPU core is running a test at any given time but cycles to the next CPU core in a round robin fashion after every test

Sequential - only one CPU core is running a test at any given time but cycles to the next CPU after a certain memory size has been tested by the CPU core.

2.5.6.5 RAM Benchmark

The RAM Benchmark screen allows the user to benchmark their RAM modules and save the results to disk. The benchmark results can then be plotted onto a graph for comparison.



Block Read/Write - specifies whether memory read or write performance should be benchmarked

Test Mode - specifies which of the following tests to perform:

Memory Speed Per Access Step Size

This test measures the memory speed with respect to memory accesses of varying distances. This test runs through a block of memory sequentially, accessing every address. Next, it runs through the same block again, except this time it accesses every second address (step size 2). Then every fourth address (step size 4) is accessed and so on, until a certain maximum step size is reached. We should expect to see a decline in memory speed as the distance between memory accesses increases.

Memory Speed Per Block Size

This test measures the memory speed with respect to varying memory block sizes. On each subsequent iteration, the block size is increased until a certain maximum block size is reached. Typically, a drop in speed shall be observed when the block no longer fits in the respective cache levels, resulting in much

slower access to main memory.

Access Data Width – (Memory Speed Per Block Size only) The size of data in bits (8, 16, 32, or 64 bits) to access at one time. The best results will usually be obtained when selecting an access size that matches the system's native mode.


Start – performs the benchmark and saves the result to disk under Benchmark\. Pressing **Esc** will cancel the test in the middle of testing.

View Prev. Results – allows the user to select from a list of benchmark results saved under Benchmark\ to plot on a graph



Use the up / down arrow keys or mouse to highlight a result to graph, then press enter or click. A maximum of 8 results can be plotted onto a single graph. Once all desired results are selected, selecting **Graph selected** result(s) shall plot the selected result(s) to a graph.

The graph can be saved to a bitmap file or exported into an HTML file as a report (*Pro version only*). The report contains the system information, the graph itself, and the corresponding raw data.

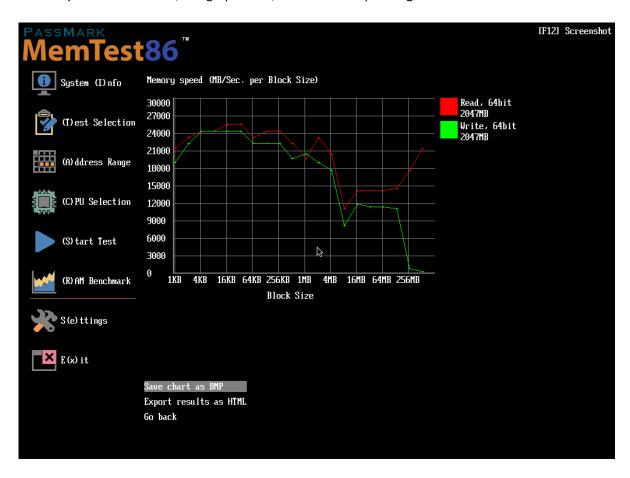

2.5.6.6 Settings

The Settings screen allows the user to set all other general configuration options pertaining to the MemTest86 tool.



Language - sets the language used in the program

Resolution - change the screen resolution (main menu only)

Save current configuration to file - (*Pro version only*) overwrites the *mt86.cfg* configuration file with the current settings

Change log/report save location - (*Pro version only*) change the disk volume (file system) destination of log & report files

2.5.7 Configuration File (Pro version only)

Memory test parameters can also be set via a configuration file (mt86.cfg) that is loaded on startup, without the need to manually configure the memory tests every time MemTest86 is run. This is useful especially in testing environments where memory tests need to be executed in an automated fashion without user intervention.

MemTest86 attempts to look for configuration files in the following order:

- 1. <SMBIOS-baseboard-product>-mt86.cfg
- 2. <Memory-size-in-GB>GB-mt86.cfg
- 3. mt86.cfg

MemTest86 shall first attempt to load a filename prefixed with the system's baseboard (eg. Surface Promt86.cfg). This allows for separate configuration files for different baseboards, if running MemTest86 on multiple systems.

If no suitable file was found, MemTest86 shall attempt to load a filename prefixed with the total memory size in GB (eg. 8GB-mt86.cfg). This allows for separate configuration files depending on the size of memory.

Finally, if a suitable file is still not found, it will load the default mt86.cfg configuration file.

2.5.7.1 Basic Configuration File Format

The basic configuration file format supports a single configuration containing a set of parameter and value pairs.

Lines that start with '#' indicate a comment line. All parameters are specified as follows:

```
[Parameter name]=[Parameter value]
```

A sample basic configuration file is as follows:

MemTest86 basic configuration file

```
TSTLIST=0,1,3,5,8
TESTCFGFILE=customtests.cfg
NUMPASS=3
ADDRLIMLO=0x1000000
ADDRLIMHI=0x20000000
CPUSEL=PARALLEL
CPUNUM=1
CPULIST=2,3
MAXCPUS=32
ECCPOLL=0
ECCINJECT=0
MEMCACHE=0
LANG=ja-JP
AUTOMODE=1
EXITMODE=1
MINSPDS=0
EXACTSPDSIZE=8192
CHECKMEMSPDSIZE=1
SPDMANUF=Kingston
SPDPARTNO=9905402
SPDMATCH=1
HAMMERPAT=0x10101010
HAMMERMODE=SINGLE
```

2.5.7.2 Multiple Configuration File Format

The multiple configuration file format extends the basic format by supporting multiple configurations in a single file.

Each set of configuration data would be separated via XML style tags as specified below:

```
<CONFIG="Configuration-name-1">
...
[Same as basic configuration format]
...
</CONFIG>
<CONFIG="Configuration-name-2">
...
[Same as basic configuration format]
...
</CONFIG>
```

Up to 10 <CONFIG> blocks are supported. Configuration name strings must be no more than 80 ASCII characters and must not contain quotes (") or angle bracket (< >) characters.

If more than one configuration is defined, the user shall be prompted during the MemTest86 boot phase as follows:

```
Multiple configurations detected. Please select one of the following:
1. Configuration-name-1
2. Configuration-name-2
```

The <CFGDEFAULT=X> tag is used to specify the default configuration. This can be either "LAST" or a number between 1 and the number of configuration profiles. If "LAST" is specified, MemTest86 will attempt to read the last configuration number from a file named [MAC-address].lastcfg (e.g. 00-50-56-3F-5C-05.lastcfg). If no such file exists, configuration 1 (i.e. first configuration) will be used.

The <CFGTIMEOUT=X> tag is used to specify the timeout in seconds. Default is 0, which indicates no timeout. If no configuration is selected after the timeout expires, the default configuration will be loaded.

A sample multiple configuration file is as follows:

```
# MemTest86 multiple configuration file
# Configuration 1
<CONFIG="Short test, 1 pass, core tests only">
TSTLTST=6.7.8
TESTCFGFILE=customtests.cfg
NUMPASS=1
MEMREMMB=16
MINMEMRANGEMB=16
</CONFIG>
# Configuration 2
<CONFIG="Full test, 8 passes">
TSTLIST=0,1,2,3,4,5,6,7,8,10,11,12
TESTCFGFILE=customtests.cfg
NUMPASS=8
MEMREMMB=16
</CONFIG>
<CFGDEFAULT=LAST>
<CFGTIMEOUT=60>
```

During MemTest86 boot, the following prompt shall be displayed to the user:

```
Multiple configurations detected. Please select one of the following:
1. Short test, 1 pass, core tests only
2. Full test, 8 passes

Default configuration (*) shall be loaded in X seconds
```

2.5.7.3 List of Configuration Parameters

The following table summarizes the list of supported parameters:

Parameter	Description
TSTLIST	List of tests to execute in the test sequence. Each test is specified by a test number, separated by a comma.
TESTCFGFILE	Specifies the name of the file containing custom individual test definitions. This replaces the standard Test 0-13 individual tests used by default.
	See Custom test definitions (Pro version only) for file format specifications.
NUMPASS	Number of iterations of the test sequence to execute. This must be a number greater than 0.
ADDRLIMLO	The lower limit of the address range to test. To specify a hex address, the address must begin with '0x'. Otherwise, the address shall be interpreted as a decimal address.
ADDRLIMHI	The upper limit of the address range to test. To specify a hex address, the address must begin with 'Ox'. Otherwise, the address shall be interpreted as a decimal address.
MEMREMMB	Minimum amount of RAM (in MB) to leave unallocated for testing. This is to allow UEFI runtime to operate properly without being memory starved. By default, this value is 16MB.
MINMEMRANGEMB	Minimum size (in MB) of contiguous memory ranges to allocate for testing. Memory ranges smaller than this size should be left unallocated as it may be used by UEFI runtime. By default, this value is 16MB.
CPUSEL	One of the following CPU selection modes: 'SINGLE' – Single-threading mode where the test is performed on a single CPU core 'PARALLEL' – Multithreading mode where the test is performed concurrently on all enabled CPU cores (default] 'RROBIN' – Single-threading mode where the CPU core is cycled after each test (ie. Round Robin) 'SEQ' – Single-threading mode where the CPU core is cycled after every 256MB memory segment (ie. Sequential)
CPUNUM	The CPU # of the logical CPU core to test in SINGLE CPU mode. This parameter only has an effect if CPUSEL is set to 'SINGLE' and is ignored otherwise. This value must be less than the value specified by MAXCPUS.
CPULIST	List of CPUs to enable for memory testing. This is useful for using only a subset of the available CPUs when performing memory testing. Each CPU is specified by a CPU number, separated by a comma. By default, all available CPUs are enabled.
MAXCPUS	The maximum number of logical CPUs cores to be enabled for testing. Only CPU numbers less than this value can be enabled. By default, this value is 256. This value must be at least 1 and no more than 512.

DISABLEMP	Specifies whether to disable multiprocessor support. This can be used as a workaround for certain UEFI firmware that have issues running MemTest86 in multi-CPU modes. 0 – Do not disable multiprocessor support (default) 1 – Disable multiprocessor support
ENABLEHT	Specifies whether to enable testing on logical cores. By default, memory tests are not run on logical cores. 0 – Do not enable testing on logical cores(default) 1 – Enable testing on logical cores
ECCPOLL	Specifies whether ECC errors shall be polled. 0 – Polling disabled 1 – Polling enabled (default)
ECCINJECT	Specifies whether ECC error injection shall be enabled. 0 – ECC injection disabled (default) 1 – ECC injection enabled
TSODPOLL	Specifies whether DIMM temperature sensors shall be polled. 0 – Polling disabled 1 – Polling enabled (default)
MEMCACHE	Specifies the memory caching mode to use for testing.
	 0 - Memory caching disabled 1 - Memory caching enabled (default) 2 - Write-combining* 3 - Write-through* 4 - Write-protect* 5 - Write-back*
	* only available for X86 systems
PASS1FULL	Specifies whether the first pass shall run the full or reduced test. By default, the first pass shall run a reduced test (ie. fewer iterations) in order to detect the most obvious errors as soon as possible. 0 – Reduced test (default) 1 – Full test
ADDR2CHBITS	List of bit positions of a memory address to exclusive-or (XOR) to determine which memory channel (A or B) is used. This is useful if you know that the memory controller maps a particular address to a channel using this decoding scheme. If this parameter is specified and MemTest86 detects a memory error, the channel number will be calculated and displayed along with the faulty address. Each bit position specified is separated by a comma. For example,
	ADDR2CHBITS=1,8,9
	will XOR bits 1,8,9 of the address to determine the channel.
ADDR2SLBITS	List of bit positions of a memory address to exclusive-or (XOR) to determine which slot (0 or 1) is used. This is useful if you know that the memory controller maps a particular address to a slot using this decoding scheme. If this parameter is specified and MemTest86 detects a memory error, the slot number will be calculated and displayed along with the faulting address. Each bit position specified is separated by a comma. For example,
	ADDR2SLBITS=3,4
	will XOR bits 3,4 of the address to determine the slot.

ADDR2CSBITS

List of bit positions of a memory address to exclusive-or (XOR) to determine the chip select bits (0 or 1). This is useful if you know that the memory controller maps a particular address to a CS bit using this decoding scheme. If this parameter is specified and MemTest86 detects a memory error, the CS bit will be calculated and displayed along with the faulting address. Each bit position specified is separated by a comma. For example,

ADDR2CSBITS=5,11

will XOR bits 5, 11 of the address to determine the CS bit.

CHIPMAP

.{density}GB

[
.{DDR4|DDR5}
.{DIMM|SODIMM|CDIMM|CS
ODIMM}
.{num-ranks}R
.x{chip-width}

Lookup table used to map each DRAM chip to a unique ID label when tracking chip-level errors (Site Edition only). The label string must be no more than 6 characters. By default, the chips shall be labeled from U0...U15. For example,

```
CHIPMAP= 00_A, 01_A, 02_A, 03_A, 00_B, 01_B, 02_B, 03_B
```

shall label the first chip as "00_A", the second chip as "01_A" and so forth according to the ordering convention defined in DIMM / DRAM chip error decoding (Pro & Site Edition only)

There is a special case for labels that are non-negative numbers, where the string shall be prepended with "U". For example,

```
CHIPMAP=1,3,5,7,2,4,6,8
```

shall label the DRAM chips as "U1", "U3", "U5", "U7", "U2", "U4", "U6", "U8".

This parameter also supports different mappings for each RAM module configuration. This is specified by optional attributes following the CHIPMAP parameter. For example,

```
# Map for all DDR5 modules
CHIPMAP.DDR5=3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18
# Map for all DDR5 CUDIMM modules
CHIPMAP.DDR5.CDIMM=DAR0B0,DAR0B1,DAR0B2,DAR0B3,DBR0B0,DBR0B1,DBR0B2,DBR0B3
# Map for all DDR5 CSODIMM modules
CHIPMAP.DDR5.CSODIMM=DAR0B0, DAR0B1, DAR0B2, DAR0B3, DBR0B0, DBR0B1, DBR0B2, DBR0B3
# Map for all DDR5 CAMM2 modules
CHIPMAP.DDR5.CAMM2=DAROW0,DAROw1,DBR0w0,DBR0W1
# Map for all DDR5, SODIMM, 1-rank modules
CHIPMAP.DDR5.SODIMM.1R=1,2,3,4,11,12,13,14
# Map for all DDR5, DIMM, 1-rank, x8 width, 8GB modules
CHIPMAP.DDR5.DIMM.1R.x8.8GB=3,4,5,6,7,8,9,10
# Map for all DDR5, DIMM, 2-rank, x8 width, 16GB modules
CHIPMAP.DDR5.DIMM.2R.x8.16GB=3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18
# Map for all DDR4 modules
CHIPMAP.DDR4=1,2,3,4,6,7,8,9,10,11,12,13,14,15,16,17
# Map for all DDR4, SODIMM, 1-rank modules
CHIPMAP.DDR4.SODIMM.1R=1,2,3,4,11,12,13,14
# Map for all DDR4, DIMM, 1-rank, x8 width, 8GB modules
CHIPMAP.DDR4.DIMM.1R.x8.8GB=1,2,3,4,5,6,7,8
# Map for all DDR4, DIMM, 2-rank, x8 width, 16GB modules
CHIPMAP.DDR4.DIMM.2R.x8.16GB=1,2,3,4,6,7,8,9,10,11,12,13,14,15,16,17
```

If there are multiple matches, the chip map parameter that matches the most attributes shall be applied.

LANG	Specifies one of the following languages to use: 'en-US' — English 'fr-FR' — French 'it-IT' — Italian 'es-AR' — Spanish (Latin American) 'pt-BR' — Portuguese (Brazil) 'de-DE' — German 'cs-CZ' — Czech 'pI-PL' — Polish 'ru-RU' — Russian 'ca-ES' — Catalan 'ja-JP' — Japanese 'zh-CN' — Chinese (Simplified) 'zh-HK' — Chinese (Traditional)
REPORTNUMERRS	Number of the most recent errors to display in the report file. This number must be no more than 5000.
REPORTNUMWARN	Number of the most recent warnings to display in the report file. This number must be no more than 5000. Currently, this parameter is used only for the Hammer Test (Test 13)
REPORTPREFIX	Specifies whether the report filename shall be prepended with a prefix string. 'BASEBOARDSN' – Use the SMBIOS Baseboard serial number string 'SYSINFOSN' – Use the SMBIOS System Information serial number string 'RAMSN' – Use the first, non-empty SMBIOS RAM serial number string 'MACADDR' – Use the MAC address of the network interface 'DEFAULT' – None (Pro version); SMBIOS Baseboard serial number (Site edition)
REPORTPREPEND	Specifies the string to prepend to the report filename. If REPORTPREFIX is specified, the REPORTPREPEND string shall precede the REPORTPREFIX string.
AUTOMODE	Specifies the level of user intervention to use when running the memory tests. O – Auto mode disabled (default). Splash screen and main menu are displayed. User is prompted to save the report file when the tests have completed. 1 – Auto mode enabled. The tests are started immediately, skipping the splash screen and main menu. Once the tests have completed, the test results are automatically saved to the report file and the system is rebooted. 2 – Auto mode w/ prompts. The tests are started immediately, skipping the splash screen and main menu. Once the tests have completed, the test results are automatically saved to the report file and waits for user input before returning to the main menu.
AUTOREPORT	If AUTOMODE is set to 1 or 2, this parameter specifies whether to automatically save test results to the report file. 0 – Do not save test results automatically 1 – Save test results automatically (default)
AUTOREPORTFMT	Specifies the format of the report when AUTOMODE is enabled and AUTOREPORT=1. 'HTML' – Save the report as an HTML file (default) 'BIN' – Save the report as a binary file, according to the following structure: See Binary results file (Pro version only) for the binary file format.
AUTOPROMPTFAIL	Specifies whether to display the test result and ask for user intervention on test failure, even when AUTOMODE is enabled 0 – Do not prompt for user intervention on test failure (default) 1 – Prompt for user intervention on test failure

SKIPSPLASH	Specifies whether to skip the 10 second splash screen and proceed directly to the main menu. O – Do not skip splash screen (default) 1 – Skip splash screen and proceed directly to the main menu
SKIPDECODE	Specifies whether to skip the graphical DIMM decode results screen after test completion. 0 – Do not skip the DIMM decode screen 1 – Always skip the DIMM decode screen and proceed directly to the results summary 2 – Skip the DIMM decode screen for DDR4/LPDDR4 systems 3 – Skip the DIMM decode screen for DDR5/LPDDR5 systems
EXITMODE	Specifies the system behaviour when MemTest86 exits 0 – Reboot the system 1 – Shutdown the system 2 – Exit application and return control to UEFI BIOS 3 – Prompt the user (default)
DISABLESPD	Specifies whether to disable collection of SPD data on startup. This is a workaround to prevent throttling of memory speeds resulting in increased test times. This occurs when reading SPD data interferes with the chipset's Closed-Loop Thermal Throttling (CLTT) mechanism. 0 – Do not disable SPD collection(default) 1 – Disable SPD collection
MINSPDS	Minimum number of RAM SPDs to be detected before allowing the memory tests to begin.
EXACTSPDS	Exact number of RAM SPDs to be detected before allowing the memory tests to begin. If this parameter is set, MINSPDS parameter is ignored.
EXACTSPDSIZE	Total size (in MB) of the capacity of all detected RAM SPDs to match before allowing the memory tests to begin.
CHECKMEMSPDSIZE	Specifies whether to check if the total memory capacity of all RAM SPDs detected is consistent with the system memory size before allowing the memory tests to begin. 0 – Do not check for consistency (default) 1 – Check for consistency
CHECKMEMSPEED [. <part_no_string>]</part_no_string>	Specifies either an SPD profile or a minimum speed to verify against the configured memory speed (within 1%) before allowing memory tests to begin. This can be one of the following values: 'OFF' – Disable memory speed check (default) 'JEDEC' – Compare with the memory speed in the standard JEDEC profile 'MAX' – Compare with the maximum memory speed of all profiles (JEDEC/XMP/EXPO) supported by the module 'XMP1' – Compare with the memory speed in XMP profile 1 'XMP2' – Compare with the memory speed in XMP profile 2 'EXPO1' – Compare with the memory speed in EXPO profile 1 'EXPO2' – Compare with the memory speed in XMP profile 2 'MIN_SPEED> – Compare with the specified minimum memory speed (must be greater than 0) For example, CHECKMEMS PEED=EXPO2 shall verify whether the detected memory speed is within 1% of the memory speed supported by a module's EXPO profile 2.

	CHECKMEMSPEED=5600
	shall verify whether the detected memory speed is greater than 5600 MT/s.
	This parameter also supports an optional part number string (PART_NO_STRING) which enables the check only if there is a match with the module part number. This is specified by an optional attribute following the CHECKMEMSPEED parameter. The string may include wildcard characters (*) that match any character(s). For example,
	CHECKMEMSPEED.C*16G4SF*832*=MAX
	would perform the max supported memory speed check if there is a module with a part number CT16G4SFS832A.
	If there are multiple CHECKMEMSPEED entries, only the first matching line would apply. No further checking of other CHECKMEMSPEED lines shall be performed.
SPDMANUF	Specifies a case-sensitive substring to match the JEDEC manufacturer of all detected RAM SPDs before allowing the memory tests to begin.
SPDMATCH	Specifies whether to perform matching of RAM SPD bytes against the raw values stored in the SPD.spd file before the tests start and after the tests are complete. See SPD.spd file specifications (Pro version only). The tests will not start if any of the following are satisfied: • There is a mismatch with the values stored in SPD.spd • No valid SPD.spd file was found • No SPD modules were detected
	 0 – Do not perform the SPD match check (default) 1 – Perform the SPD match check
SPDREPORTBYTELO	Specifies the lower offset of the SPD byte range to include in the HTML report. Must be less than or equal to SPDREPORTBYTEHI.
SPDREPORTBYTEHI	Specifies the upper offset of the SPD byte range to include in the HTML report. Must be greater or equal to SPDREPORTBYTELO.
SPDREPORTEXTSN	Specifies whether to use the module's extended, 18-digit serial number or standard 8-digit JEDEC serial number in reports. The extended serial number encodes additional manufacture information (including the manufacture ID, date and location).
	 0 – Use the standard 8-digital serial number (default) 1 – Use the extended 18-digit serial number
SPDPARTNO	Specifies a case-sensitive substring to match the part number of all detected RAM SPDs before allowing the memory tests to begin.
SAMESPDPARTNO	Specifies whether the RAM SPD Part Numbers must match before allowing the memory tests to begin.
BGCOLOR	Specifies an alternative background colour to use: 'BLACK' 'BLUE' 'GREEN' 'CYAN' 'RED' 'MAGENTA' 'BROWN' 'LIGHTGRAY

HAMMERPAT	Specifies a 32-bit data pattern to use for the row hammer test (Test 13). If this parameter is not specified, random data patterns are used.
HAMMERMODE	Specifies one of the following hammering algorithms to use for the row hammer test (Test 13): 'SINGLE' – single-sided hammer test 'DOUBLE' – double-sided hammer test (default)
HAMMERSTEP	The step size in bytes to determine the next row address pair to hammer. The size can be specified as a decimal or hex number. To specify a hex number, the size must begin with '0x'. This value must be greater than or equal to 64 bytes.
CONSOLEMODE	Specifies the console mode to use for the UEFI console. The UEFI firmware supports 1 or more console modes that determine the resolution of the console. All UEFI firmware supported mode 0 which is the minimum supported resolution of 80x25.
CONSOLEONLY	Specifies whether to run using the console only (ie. no graphics). This allows for systems without graphics support (eg. Systems with serial console only) O – Normal mode (Enable graphics support) 1 – Console only mode (Do not enable graphics support)
BITFADESECS	Specifies the sleep time in seconds to use for the Bit Fade test (Test 10). By default, the sleep time is 300 seconds (5 minutes). This value must be between 180 seconds (3 minutes) and 600,000 seconds (166.67 hours).
	In general, setting the sleep interval to a longer value shall test the data retention of RAM more thoroughly. To our knowledge, although there have been no comprehensive studies that determine the optimal sleep period, setting a sleep interval of 5 to 10 minutes would be a good compromise between comprehensive testing and reasonable testing time.
MAXERRCOUNT	Specifies the maximum number of errors before the tests are aborted. By default, the value is 10000.
TFTPSERVERIP	Specifies a TFTP server IP address that is different from the PXE/DHCP server IP for saving the report files
TFTPSTATUSSECS	Specifies the period in seconds to report the current test status to the TFTP server, which is displayed in the management console. By default, the period is 60 seconds (1 minute). This value must be between 10 seconds and 600 seconds (10 minutes).
TCPDISABLE	Specifies whether to disable attempts to connect via TCP/IP to the management console. 0 – Do not disable TCP/IP uploading to the management console (default) 1 – Disable TCP/IP connection to the management console
TCPSERVERIP	Specifies a TCP/IP server IP address for connection to the management console
TCPSERVERPORT	Specifies a TCP server port for connection to the management console
TCPCLIENTIP	Specifies a local TCP/IP address when DHCP is not enabled
TCPREQUESTLOCATION	Specifies the URL request path (and cloud API key) to the management console
TCPGATEWAYIP	Specifies the default gateway route IP address to allow for connections outside the local network to the management console
DHCPDISABLE	Specifies whether to disable attempts to automatically configure a local IP address from a DHCP server on the network. Memtest86 will default to using the address specified with the TCPCLIENTIP address if DHCP is disabled. O – Do not disable automatic local IP address configuration 1 – Disable automatic local address configuration (default)
PMPDISABLE	Specifies whether to disable Management Console integration via TFTP uploading of XML messages

	 0 – Do not disable TFTP uploading of XML messages (default) 1 – Disable TFTP uploading of XML messages
RTCSYNC	Specifies whether to set the real-time clock (RTC) by reading a file, <i>CurrentTime.txt</i> , from the PXE server. The format of the time is as follows:
	YYYY-MM-DD hh:mm:ss
	For example, 2020-05-22 00:53:14
	 0 – Do not synchronize the real-time clock with the PXE server (default) 1 – Synchronize the real-time clock with the PXE server
TRIGGERONERR	Specifies whether to enable triggering on memory error for use with logic analyzers. Before the test is started, the memory address of the structure where errors are logged is displayed on screen to allow for configuration of the logic analyzer. When memory errors are detected, the pattern 0xDEADBEEF and error details are written to the following structure:
	<pre>struct ERRINFO { UINT64 Signature; // Stores 0xDEADBEEFDEADBEEF UINT64 PhysAddr; // Stores the address of the error declspec(align(16))m128i</pre>
	 0 – Do not trigger and log on memory errors (default) 1 – Trigger and log memory errors to a specified location in memory
VERBOSITY	Specifies the verbosity level of the debug output O – Lowest verbosity level (default) 1 – Highest verbosity level
TPL	Specifies the UEFI task priority level of the MemTest86 application. UEFI tasks with higher priority level may interrupt and preempt MemTest86. 'APPLICATION' – lowest priority level (default) 'CALLBACK' – intermediate priority level 'NOTIFY' – high priority level 'HIGH_LEVEL' – highest priority level

Some of the parameters (such as NUMPASS, ADDRLIMLO, ADDRLIMHI) can be changed via the main menu. These changes are not automatically updated in the configuration file unless explicitly saved by the user. This can be done under the 'Settings' screen in the main menu.

2.5.8 Testing

Once the memory test has started, the following screen which shows the test status is displayed:



MemTest86 executes a series of numbered test sections to check for errors. The execution order for these tests has been arranged so that errors will be detected as rapidly as possible.

The time required for a complete pass of MemTest86 will vary greatly depending on CPU speed, memory speed and memory size.

If memory errors are detected they will be displayed on the lower half of the screen.

If MemTest86 runs multiple passes without errors, it is very likely the memory is functioning properly. In addition, successful execution of MemTest86 implicitly assures that your CPU (to a certain extent) is functioning properly.

MemTest86 cannot diagnose many types of PC failures. For example, a faulty CPU that causes Windows to crash will most likely cause MemTest86 to crash as well.

See Troubleshooting Memory Errors for details on how to interpret memory errors detected by MemTest86.

2.5.8.1 Runtime Configuration Options

MemTest86 may be configured during operation via runtime configuration commands. Pressing the "C" key at any time will display the runtime command menu.

Settings:

- (1) Skip Current Test
- (2) End Test
- (0) Continue

The runtime configuration commands allow the user to adjust the following settings.

- (1) Skip Current Test- Aborts the current test and starts the next test in the sequence
- (2) End Test Stops the test and displays a summary of the results
- (3) **Continue** Resume the test

2.5.9 Test Results/Reports

At the end of the test, a summary of the test results is displayed, as shown in the following screenshot:

```
MemTest86 Result summary
PassMark (R) Software
www.passmark.com

Test Start Time : 2021-02-01 16:30:17
Elapsed Time : 0:00:21
CPUs Active : 4
CPU Ienperature Min/Max/Ave : -/-/-
RAM Temperature Min/Max/Ave : -/-/-
# Tests Passed : 8/8 (1007)

Lowest Error Address : 0x3D65D70A (982MB)
Highest Error Address : 0x3D65D71A (982MB)
Bits in Error Hask : 00000000FFFFFFFF
Bits in Error - Iotal: 32 Min: 0 Max: 32 Avg: 32
Max Contiguous Errors : 2
CPUs in Error : 0
ECC Correctable Errors : 9 ECC Uncorrectable Errors: 27
```

Lowest Error Address:

The lowest address where an error has been reported.

Highest Error Address:

The highest address that where an error has been reported.

Bits in Error Mask:

A mask of all bits that have been in error (hexadecimal).

Bits in Error:

Total bit in error for all error instances and the min, max and average bit in error of each individual occurrence.

Max Contiguous Errors:

The maximum contiguous addresses with errors.

CPUs that detected memory errors:

List of CPU cores that detected memory errors.

ECC Correctable/Uncorrectable Errors:

The number of errors that have been corrected/uncorrected by ECC hardware.

Test Errors:

On the right-hand side of the screen the number of errors for each test are displayed.

2.5.9.1 HTML Report file

To save the test results as an HTML report, press 'y' to save when prompted. Note the file name of the report as this will be saved to the boot media (eg. USB or PXE) that MemTest86 booted from. This is shown in the screenshot below.

For Pro and Site editions, HTML report files can be automatically saved by specifying the AUTOMODE and AUTOREPORTFMT configuration file parameters. See *Configuration File (Pro version only)* for more details about

configuration file parameters.

When network booting from PXE (Site edition only), HTML reports are uploaded to the PXE server. This can be useful for automated workflows such as production line environments.

2.5.9.1.1 Blacklisting RAM Pages (Pro version only)

MemTest86 automatic generates Linux BadRAM and Windows badmemorylist string patterns from detected errors in the HTML report, which can be passed to the operating system to allow the system to temporarily boot. See *Blacklisting RAM Pages* for instructions on how to use RAM blacklist string patterns.

2.5.9.1.2 Customizing Test Reports (Pro version only)

The test report is fully customizable by modifying the following files:

mt86head.htm - The HTML code that will be used as a header for the test report. This can contain a company logo, contact information or any additional information about the test environment.

mt86foot.htm – The HTML code that will be used as a footer for the test report. Examples of usage include a signature line to indicate the technician who performed the test, or a disclaimer about the validity of the test results.

report.css – The stylesheet used to specify the appearance of the report. The file itself contains all the properties that are used, along with several templates that can be used to customize the report.

2.5.9.2 Binary results file (Pro version only)

For environments with limited storage space and processing capacity, the user may choose to save the results as a binary file. The format of the binary file is as follows.

```
typedef struct TESTRESULT {
CHAR8 Signature[4];// "MT86" signature
UINT16 Revision; // Current revision: 1.1 (Upper byte: major version; Lower byte: minor version)
UINT32 StartTime; //Start test time in Unix time, accurate to 1 sec
UINT32 ElapsedTime;//Test elapsed time in seconds
UINT64 RangeMin; //Min address tested
UINT64 RangeMax;
                   //Max address tested
UINT16 CPUSelMode; //0-Single CPU, 1-Parallel, 2-Round Robin, 3-Sequential
INT16 CPUTempMin; //Min CPU temp for duration of test (-1 if N/A)
INT16 CPUTempMax; //Max CPU temp for duration of test (-1 if N/A)
INT16 CPUTempAve; //Ave CPU temp for duration of test (-1 if N/A)
INT16 RAMTempMin; //Min RAM temp for duration of test (-1 if N/A)
INT16 RAMTempMax; //Max RAM temp for duration of test (-1 if N/A)
INT16 RAMTempAve; //Ave RAM temp for duration of test (-1 if N/A)
BOOLEAN ECCSupport; // 0 if ECC not supported, != 0 if ECC supported
INT8 TestResult;
                  // {0:PASS, 1:INCOMPLETE PASS, -1:FAIL, -2:INCOMPLETE FAIL}
UINT32 ErrorCode; // Error code
UINT32 NumErrors; //Number of errors from all tests. Must be 0 if Passed == True
UINT64 MinErrorAddr;//Lowest address that had an error
UINT64 MaxErrorAddr;//Highest address that had an error
UINT64 ErrorBits; //Bit coded field showing the bits in error
UINT32 NumCorrECCErrors;//Number of detected and corrected ECC errors from all tests.
UINT32 NumUncorrECCErrors;//Number of detected but uncorrected ECC errors from all tests.
UINT8 Reserved[14]; // For future use
UINT16 NumTestsEnabled;// Number of individual tests enabled
```

```
struct {
  UINT8 TestNo;
                    // Test ID number
  UINT16 NumTestsPassed;// Number tests passed for this test number
  UINT16 NumTestsCompleted;// Number tests completed for this test number
  UINT32 NumErrors; // Number of errors detected for this test number
} AllTests[1]; // Variable-sized array of size=NumTestsEnabled
struct SLOTCHIP ERRINFO {
  UINT16 SlotChipErrsArrCount; // Size of variable-sized array SlotChipErrs below
  struct {
    INT8 Slot:
                         // Slot number (-1 for unknown)
    INT8 Chip;
                         // Chip number (-1 for unknown)
    UINT32 NumErrors;
                         // Number of errors detected for this slot/chip combination
  } SlotChipErrs[1];
} SlotChipErrInfo;
} TESTRESULT;
```


Binary result files cannot be saved manually and can only be saved by specifying the AUTOMODE and AUTOREPORTFMT configuration file parameters. See *Configuration File (Pro version only)* for more details about configuration file parameters.

As with HTML report files, binary results can be automatically saved to disk or uploaded to the PXE server, supporting automated workflows such as production line environments.

2.5.10 DIMM / DRAM chip error decoding (Pro & Site Edition only)


MemTest86 V10 and later (Pro version) supports decoding and identification of the DIMM module on which a particular error occurred. This can be used to narrow down potentially bad RAM modules more efficiently. This is done by decoding the memory address with an error and locating the physical hardware that corresponds to that address. RAM access involves multiple memory channels, multiple ranks, interleaving and hashing of addresses making this a complex process.

If supported, MemTest86 reports the decoded DIMM and DRAM chip when memory errors are detected during testing. In addition, a graphical summary report of memory errors for each module is displayed on test completion (shown below), as well as in the HTML report.

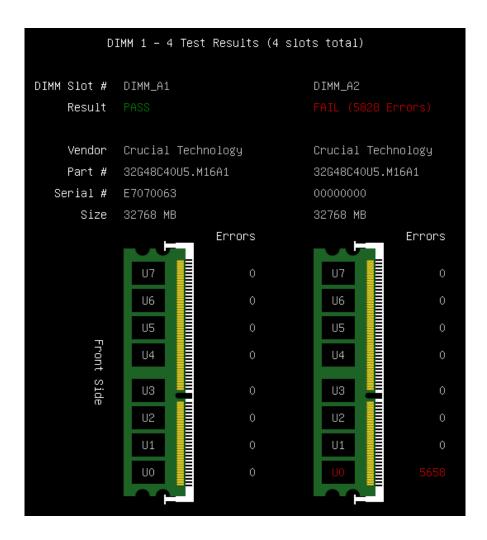

MemTest86 (Site Edition) further supports decoding of the individual DRAM chip in which the error occurred. The DRAM chip mapping (eg. U0...U7) can be defined with the configuration file parameter *CHIPMAP*. See *Configuration File* (*Pro version only*) for more details about configuration file parameters.

The chip ordering convention is illustrated in the images below.

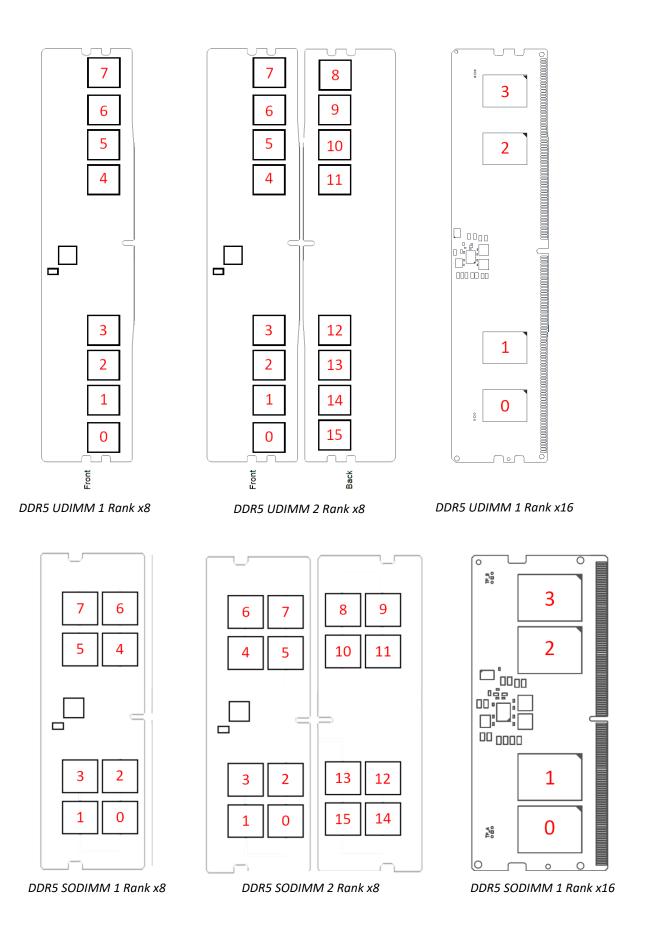

Note that due to the nature of the tests, accurate slot and chip decoding is not possible for test 6 or test 14. As such, no errors found during either test are decoded.

2.5.11 Troubleshooting MemTest86 Problems

A log file (MemTest86-<timestamp>.log) is automatically created and updated while MemTest86 is running. This log file contains information that is helpful in diagnosing possible memory failures or problems with MemTest86 itself. If you believe you may have encountered a bug with MemTest86, please report problems to help@passmark.com.

3 Troubleshooting Memory Errors

Please be aware that not all errors reported by MemTest86 are due to bad memory. The test implicitly tests the CPU, L1 and L2 caches as well as the motherboard. It is impossible for the test to determine what causes the failure to occur. However, most failures will be due to a problem with the memory module. When it is not, the only option is to replace parts until the failure is corrected.

Sometimes memory errors show up due to component incompatibility. A memory module may work fine in one system and not in another. This is not uncommon and is a source of confusion. In these situations, the components are not necessarily bad but have marginal conditions that when combined with other components will cause errors.

Often the memory works in a different system, or the vendor insists that it is good. In these cases, the memory is not necessarily bad but is not able to operate reliably at full speed. Sometimes more conservative memory timings on the motherboard will correct these errors. In other cases, the only option is to replace the memory with better quality, higher speed memory. Don't buy cheap memory and expect it to work reliably. On occasion "block move" test errors will occur even with name brand memory and a quality motherboard. These errors are legitimate and should be corrected.

All valid memory errors should be corrected. It is possible that a particular error will never show up in normal operation. However, operating with marginal memory is risky and can result in data loss and even disk corruption. Even if there is no overt indication of problems you cannot assume that your system is unaffected. Sometimes intermittent errors can cause problems that do not show up for a long time. You can be sure that Murphy will get you if you know about a memory error and ignore it.

We are often asked about the reliability of errors reported by MemTest86. In most cases, errors reported by the test are valid. There are some systems that cause MemTest86 to be confused about the size of memory and it will try to test non-existent memory. This will cause a large number of consecutive addresses to be reported as bad and generally there will be many bits in error. If you have a relatively small number of failing addresses and only one or two bits in error, you can be certain that the errors are valid. Also, intermittent errors are without exception valid. Frequently memory vendors question if MemTest86 supports their particular memory type or a chipset. MemTest86 is designed to work with all memory types and all chipsets.

MemTest86 cannot diagnose many types of PC failures. For example, a faulty CPU that causes Windows to crash will most likely just cause MemTest86 to crash in the same way.

3.1 Hammer Test (Test 13) Errors

The Hammer Test is designed to detect RAM modules that are susceptible to disturbance errors caused by charge leakage. This phenomenon is characterized in the research paper *Flipping Bits in Memory Without Accessing Them: An Experimental Study of DRAM Disturbance Errors* by Yoongu Kim et al. According to the research, a significant number of RAM modules manufactured in 2010 or newer are affected by this defect. In simple terms, susceptible RAM modules can be subjected to disturbance errors when repeatedly accessing addresses in the same memory bank but different rows in a short period of time. Errors occur when the

repeated access causes charge loss in a memory cell, before the cell contents can be refreshed at the next DRAM refresh interval.

Starting from MemTest86 v6.2, the user may see a warning indicating that the RAM may be vulnerable to high frequency row hammer bit flips. This warning appears when errors are detected during the first pass (maximum hammer rate) but no errors are detected during the second pass (lower hammer rate). See *MemTest86 Test Algorithms* for a description of the two passes that are performed during the Hammer Test (Test 13). When performing the second pass, address pairs are hammered only at the rate deemed as the maximum allowable by memory vendors (200K accesses per 64ms). Once this rate is exceeded, the integrity of memory contents may no longer be guaranteed. If errors are detected in both passes, errors are reported as normal.

The errors detected during Test 13, albeit exposed only in extreme memory access cases, are most certainly real errors. During typical home PC usage (eg. web browsing, word processing, etc.), it is less likely that the memory usage pattern will fall into the extreme case that make it vulnerable to disturbance errors. It may be of greater concern if you were running highly sensitive equipment such as medical equipment, aircraft control systems, or bank database servers. It is impossible to predict with any accuracy if these errors will occur in real life applications. One would need to do a major scientific study of thousands of computers and their usage patterns, then do a forensic analysis of each application to study how it makes use of the RAM while it executes. To date, we have only seen 1-bit errors as a result of running the Hammer Test.

There are several actions that can be taken when you discover that your RAM modules are vulnerable to disturbance errors:

- Do nothing
- Replace the RAM modules
- Use RAM modules with error-checking capabilities (eg. ECC)

Depending on your willingness to live with the possibility of these errors manifesting itself as real problems, you may choose to do nothing and accept the risk. For home use you may be willing to live with the errors. In our experience, we have several machines that have been stable for home/office use despite experiencing errors in the Hammer Test.

You may also choose to replace the RAM with modules that have been known to pass the Hammer Test. Choose RAM modules of different brands/models as it is likely that the RAM modules with the same model would still fail the Hammer test.

For sensitive equipment requiring high availability/reliability, you would replace the RAM without question and would probably switch to RAM with error correction such as ECC RAM. Even a 1-bit error can result in catastrophic consequences for say, a bank account balance. Note that not all motherboards support ECC memory, so consult the motherboard specifications before purchasing ECC RAM.

3.2 DMA Test (Test 14) Errors

The DMA test involves executing DMA-initiated memory transfers between the scratch partition of the

MemTest86 USB flash drive and the system memory. As this introduces an additional component to the data flow, errors detected by MemTest86 may not be an issue with the memory or DMA subsystem, but with the USB flash drive itself.

If MemTest86 detects errors during the DMA Test, there is a possibility of a fault in the USB flash drive. In such cases, it is recommended to re-run the tests using another known reliable USB flash drive.

If the errors persist, there may still be a possibility of a UEFI bug with the device driver DMA implementation. This is usually indicated by a sudden increase in the number of errors. If you suspect this may be the case, please see *Troubleshooting MemTest86 Problems*.

3.3 ECC Errors

During testing, MemTest86 may report ECC errors detected by the baseboard's memory controller if ECC is supported and enabled. The degree of information available for the detected ECC error depends on the baseboard chipset. This includes any of the following:

- Memory address
- DRAM address (column, row, rank, bank)
- · Channel and DIMM slot number

The following examples illustrate possible outputs displayed on screen for detected ECC errors.

```
[ECC Error] Test: 1, Addr: 0x8F32540AC
```

The ECC error was detected in memory address 0x8F32540AC.

```
[ECC Error] Test: 1, (Ch,Sl,Rk,Bk,Rw,Cl): (1,0,2,0,17900,0)
```

The ECC error was detected in the DIMM module located in channel 1, slot 0 with the indicated rank address (0x2), and bank address (0x0), row address (0x17900), column address (0x0).

```
[ECC Error] Test: 1, Channel/Slot: 1/0
```

The ECC error was detected in the DIMM module located in channel 1, slot 0. No information regarding the memory address that triggered the ECC error is available.

4 Repairing Memory Faults

When MemTest86 detects errors the error count will be incremented, and the error details will be displayed on the lower half of the screen. The key information needed to diagnose errors are the "Error Confidence Value" and the "Errors per Memory Slot" information. Error confidence values over 100 should always be considered to be legitimate. The errors per memory slot indicate both the number of memory modules present in your PC and the number of errors for each memory module. This information may not be available for older PCs. The remaining error details may be ignored.

To diagnose and repair a memory fault requires you to open your computer case and handle sensitive electronic components. With proper handling procedures this is not difficult. If you do not want to repair your own hardware, you can use MemTest86 to test your RAM but rely on a third party to do the actual repair.

4.1 Anti-Static Handling Procedures

Electronic components may be damaged by static electricity. The key to proper handling is to simply avoid causing a static discharge though the component that is being handled. This is done by discharging static buildup before a component comes in contact with another surface. For example, when installing a component into a computer, first touch a bare metal part of the computer case. If you want to set a component on a table, touch the table first and then set down the component. If you take a step or even shuffle your feet you will need to re-discharge any static buildup.

4.2 Re-Seating Memory Modules

In many cases memory problems are caused by a poor connection. This can be resolved by simply removing and reinstalling the memory module(s) using the following procedure.

- 1. Using the documentation for your motherboard locate the memory module slots and identify the memory module(s).
- 2. Using proper anti-static handing procedures remove the memory module(s). In most cases this is done by pressing down on the locking tabs at the end of the module slot.
- 3. Carefully clean any dust or debris from the module and the motherboard memory module slots.
- 4. Reinstall the memory module(s) into their original slot on the motherboard.
- 5. Rerun MemTest86.

4.3 Replacing Modules

If re-seating memory modules does not resolve the problem, then a memory module will generally need to be replaced.

When more than one module is installed, you will need to determine which module is failing.

First consult your motherboard documentation to determine if memory modules may be used individually or if they must be used in pairs. If your motherboard is configured with the minimum number of memory modules you will need to purchase a replacement memory module in order to locate the failed one. Using the guidelines

in your motherboard manual to maintain a working configuration selectively remove modules from the system and rerun MemTest86 to find the bad module(s). Be sure to carefully note which modules are in the system when the test passes and fails.

In most cases memory failures will be due to a faulty memory module and replacing the module will resolve the problem. However, the motherboard affects memory operation and may also cause memory errors. There are instances where only a particular combination of memory and motherboard will cause errors. This is typically due to the memory not being of sufficient quality and speed to keep up with the motherboard. This memory may function properly when installed in a less demanding motherboard. When errors are only detected by test #5 it is usually due to memory not being fast enough to work properly with the motherboard. More conservative memory timing BIOS settings (if supported) may resolve these problems. Otherwise, higher quality memory may be required, or possibly the motherboard may need to be replaced.

4.4 Error Validity

There are many users who question if errors detected by MemTest86 are valid. In at least 99.9% of cases reported errors will be legitimate and must be corrected. MemTest86 simply exercises all available RAM looking for errors. If any error is detected in RAM, regardless of how or where, it is a legitimate failure that needs to be corrected. There are no known issues regarding compatibility. It is possible, but unlikely, that a particular error will never show up in normal operation. However, operating with marginal memory is risky and can result in data loss and disk corruption. Even if there is no overt indication of problems you cannot assume that your system will be unaffected.

There are some rare cases where motherboard manufacturers will map hardware registers into space normally occupied by memory. When these locations are tested errors are reported. In this case, the reported errors will be invalid. To better identify these rare cases where invalid errors are reported an error confidence value is created by MemTest86. The program tracks failures and then does some simple analysis to determine the probability of invalid errors. When the confidence value exceeds 100 it is nearly impossible that the reported errors will be invalid.

5 Overclocking

5.1 Background

MemTest86 is an invaluable tool for overclocking and may be used to increase your system performance and reliability. Many shy away from overclocking fearing that it will make their PC less reliable. With a proper procedure, fine tuning your system timings is safe and, in some cases, will even improve reliability.

Before embarking on overclocking, it is important to understand the concept of margins or margin for error.

5.2 Operating Margins

To achieve high reliability computer systems are designed and tested under conditions that are more strenuous than those expected in normal use. Take for example a computer that is designed to operate with a bus frequency of 133 MHz. A quality manufacturer will design and test for operation at perhaps 140 MHz or higher. This margin for error provides confidence that even with inevitable manufacturing variances and changing conditions operation will be reliable. When components from different manufacturers are combined an even greater margin for error is required since the exact characteristics of the associated components are not known. The result is the majority of computers will end up having a much larger margin for error than is needed. This means that a lot of performance is being wasted. On the other hand, there will be a small number of systems that do not have enough margin of error and will have poor reliability even without overclocking.

Many consider overclocking as simply making a computer operate as fast as possible. This approach is unwise and will often result in unreliable operation. A much better philosophy is to adjust and fine tune computer timings to maintain an appropriate margin for error. An appropriate margin includes not leaving too much margin, wasting performance.

For example, let's say we have a computer that will operate properly with a system clock of 189 MHz. Obviously, a lot of performance will be wasted if we operate the computer at the standard 133 MHz. In addition, if the computer fails at 190 MHz it would be unwise to operate at 189 MHz since there is little margin for error and operation will likely not be reliable. An operating margin of 3% to 6% is sufficient to ensure good reliability. For this example, a system clock of 178 to 183 would be ideal. There may be cases where it will be advisable to under clock. If a system with a normal clock rate of 133 MHz does not operate properly at 136 MHz or more then there is not enough margin and under clocking is required to ensure reliability.

To summarize, overclocking should be thought of as fine tuning a computer to ensure reliability first and secondarily maximizing performance.

5.3 Using MemTest86 for Overclocking

The first step in a proper overclocking procedure is to determine the operational limits of your computer. After the operational limits have been identified the system settings may be adjusted to provide enough margin to ensure high reliability. MemTest86 is an ideal tool to accurately determine the operation limits of your memory and CPU. Using the guidelines below, experiment with the settings available for your motherboard to find settings that result in the highest clock rate combined with the highest reported memory bandwidth.

- 1. Before attempting to overclock you need to know what system parameters your motherboard will allow you to adjust and how they are adjusted. Some motherboards will allow all useful parameters to be adjusted while others do not allow for any adjustment. Consult your motherboard manual for details. Some of the parameters that may be available are:
 - · System clock rate
 - · CPU clock multiplier
 - Memory timing
 - · Memory clock multiplier
 - CPU voltage
 - Memory voltage
- 2. You need to know how to reset the CMOS to factory settings. It is common when overclocking to end up with settings that will not run the BIOS. When the parameters are set via CMOS the only way to recover is to reset the CMOS to the factory configuration. For some motherboards this is accomplished by removing a jumper. Other will require removal of the CMOS backup battery. Make sure that you know how to recover before starting.
- 3. Before adjusting any parameters, run MemTest86 for a full pass to establish a baseline. Record the memory bandwidth and CPU clock frequency for the default configuration.
- 4. Typically, the best place to start is with the system clock rate. Increase the clock rate in fairly small increments (2-4 MHz) and then run at least a partial pass of MemTest86. Running at least 15% of tests 1-5 should be the minimum amount of testing for each iteration. Continue increasing the clock rate until you get a failure. Take your time and take good notes. For each step be sure that you record the memory bandwidth reported by MemTest86. Some BIOSs automatically adjust memory timings according to clock rate. You may find that by increasing the clock rate, memory performance will decrease. Once you find a failure back off on the clock rate until you find the point at which you get errors. Once you find the point at which memory errors occur back the clock off one step and run a full pass of MemTest86 to confirm the operational limit. In some cases, the CPU will hang (stop responding) before memory errors are detected.
- 5. Some motherboards will allow you to adjust memory timing. Memory timings are typically listed as 4 values separated by hyphens. However, some motherboards only offer choices like fast, faster and fastest. There are two strategies for adjusting memory timing. If memory errors are detected before the CPU exhibits problems, then slower memory timings may be used to allow a higher system clock rate to be used. The second strategy is to use faster memory timings to get more memory bandwidth without increasing the system clock rate. It is impossible to know which values will affect errors. Some of the memory timings will affect memory bandwidth and others will not. Be sure to record the reported memory bandwidth for each parameter change.
- 6. If in step 4 the CPU hangs before memory errors appear then the CPU has less margin for error than the

memory. If available, you may want to try reducing the CPU multiplier and then continue to increase the system clock until either the CPU stops, or memory errors occur. This is helpful if memory timings are not adjustable or are ineffective.

- 7. CPU and memory voltages are adjustable on some motherboards and increasing them may allow you to run at higher speeds. In particular, higher CPU voltages tend to be quite effective for overclocking. However, higher voltages also mean higher temperatures so be sure that you have plenty of case cooling and an effective CPU cooler. Use carefully.
- 8. Some motherboards allow you to use a system clock multiplier for memory. The default is usually 1:1, or in other words the system and memory clock rates will be the same. This setting is only useful when the memory and CPU operational limits are significantly different and cannot be brought into balance using the techniques listed above.

Once you have established the operational limits of your system then you need to select settings that allow for a reasonable margin for error. Do not be tempted to use the maximum settings! A margin of 3% to 6% is recommended for reliable operation. The easiest way to add operational margin is to simply reduce the system clock rate by 3% to 6% from the maximum setting that functioned properly.

In many cases the operational limits for the CPU and memory will be different. For example, you can get more CPU speed by reducing memory settings. Or you can get more memory performance by reducing the CPU multiplier. For these cases you will need to choose a compromise. Both memory bandwidth and CPU clock rate are important so don't be tempted to only optimize for one or the other.

MemTest86 provides good assurance of reliable memory operation when overclocking. Even when a dramatic increase in memory bandwidth is achieved. If MemTest86 does not report errors and appropriate margins have been applied, then you should not hesitate to fully maximize memory timings. However, some caution must be exercised for system clock rate increases. With most motherboards the clock rate for the PCI and AGP buses is based on the system clock. Generally, these buses will have no problem running at somewhat higher rates. MemTest86 does not test PCI or AGP and does not provide any assurance that anything other than the CPU and memory are working properly. Sadly, there is currently no safe way to determine the operational limits for PCI and AGP and therefore there is no way to assure that there are appropriate margins. Unless your motherboard is able to independently establish the frequency of PCI and AGP buses you should be careful about running with large (more than 15%) increases in the system clock. In addition, running your CPU at higher frequencies will generate more heat. Small frequency increases will generally be fine with the installed CPU cooler. Larger increases in the system clock rate may necessitate a larger, more effective CPU cooler.

Appendices

Appendix A. Technical Information

Appendix A contains technical information from the MemTest86 README file that was previously released under the GNU Public License (GPL). This section provides additional background information and technical information that may be useful for advanced users.

A.1 Memory Testing Philosophy

There are many approaches for testing memory. However, many tests simply throw some patterns at memory without much thought or knowledge of memory architecture or how errors can best be detected. This works fine for hard memory failures but does little to find intermittent errors. BIOS based memory tests are useless for finding intermittent memory errors.

Memory chips consist of a large array of tightly packed memory cells, one for each bit of data. The vast majority of the intermittent failures are a result of interaction between these memory cells. Often writing a memory cell can cause one of the adjacent cells to be written with the same data. An effective memory test attempts to test for this condition. Therefore, an ideal strategy for testing memory would be the following:

- 1. write a cell with a zero
- 2. write all adjacent cells with a '1', one or more times
- 3. check that the first cell still has a zero

It should be obvious that this strategy requires an exact knowledge of how the memory cells are laid out on the chip. In addition, there is a never ending number of possible chip layouts for different chip types and manufacturers making this strategy impractical. However, there are testing algorithms that can approximate this ideal strategy.

A.2 MemTest86 Test Algorithms

MemTest86 uses two algorithms that provide a reasonable approximation of the ideal test strategy above. The first of these strategies is called moving inversions. The moving inversion test works as follows:

- 1. Fill memory with a pattern
- 2. Starting at the lowest address
 - 2a. Check that the pattern has not changed
 - 2b. Write the patterns complement
 - 2c. Increment the address

Repeat 2a - 2c

- 3. Starting at the highest address
 - 3a. Check that the pattern has not changed
 - 3b. Write the patterns complement
 - 3c. Decrement the address

Repeat 3a - 3c

This algorithm is a good approximation of an ideal memory test but there are some limitations. Most high-density chips today store data 4 to 16 bits wide. With chips that are more than one bit wide it is impossible to selectively read or write just one bit. This means that we cannot guarantee that all adjacent cells have been tested for interaction. In this case the best we can do is to use some patterns to ensure that all adjacent cells have at least been written with all possible one and zero combinations.

It can also be seen that caching, buffering and out of order execution will interfere with the moving inversions algorithm and make it less effective. It is possible to turn off cache but the memory buffering in new high-performance chips cannot be disabled. To address this limitation a new algorithm called Modulo-X was created. This algorithm is not affected by cache or buffering. The algorithm works as follows:

- 1. For starting offsets of 0 20 do steps 2-5
- 2. Write every 20th location with a pattern
- 3. Write all other locations with the patterns complement
- 4. Repeat 1b one or more times
- 5. Check every 20th location for the pattern

This algorithm accomplishes nearly the same level of adjacency testing as moving inversions but is not affected by caching or buffering. Since separate write passes (1a, 1b) and the read pass (1c) are done for all of memory we can be assured that all of the buffers and cache have been flushed between passes. The selection of 20 as the stride size was somewhat arbitrary. Larger strides may be more effective but would take longer to execute. The choice of 20 seemed to be a reasonable compromise between speed and thoroughness.

A.2.1 Individual Test Descriptions

MemTest86 executes a series of numbered test sections to check for errors. These test sections consist of a combination of test algorithm, data pattern and caching. The execution order for these tests was arranged so that errors will be detected as rapidly as possible. A description of each of the test sections follows:

Address test, walking ones

Tests all address bits in all memory banks by using a walking ones address pattern. Errors from this test are not used to calculate BadRAM patterns.

Address test, own address

Each address is written with its own address and then is checked for consistency. In theory previous tests should have caught any memory addressing problems. This test should catch any addressing errors that somehow were not previously detected.

Moving inversions, ones & zeros

This test uses the moving inversions algorithm with patterns of all ones and zeros. Cache is enabled even though it interferes to some degree with the test algorithm. With cache enabled this test does not take long and should quickly find all "hard" errors and some more subtle errors.

Moving inversions, 8-bit pattern

This is the same as test 3 but uses a 8 bit wide pattern of "walking" ones and zeros. This test will better detect subtle errors in "wide" memory chips. A total of 20 data patterns are used.

Moving inversions, random pattern

This test uses the same algorithm as test 3 but the data pattern is a random number and its complement. This test is particularly effective in finding difficult to detect data sensitive errors. A total of 60 patterns are used. The random number sequence is different with each pass so multiple passes increase effectiveness.

Block move

This test stresses memory by using block move (movsl) instructions and is based on Robert Redelmeier's burnBX test. Memory is initialized with shifting patterns that are inverted every 8 bytes. Then 4MB blocks of memory are moved around using the movsl instruction. After the moves are completed the data patterns are checked. Because the data is checked only after the memory moves are completed it is not possible to know where the error occurred. The addresses reported are only for where the bad pattern was found. Since the moves are constrained to an 8MB segment of memory the failing address will always be less than 8MB away from the reported address. Errors from this test are not used to calculate BadRAM patterns.

Moving inversions, 32-bit pattern

This is a variation of the moving inversions algorithm that shifts the data pattern left one bit for each successive address. The starting bit position is shifted left for each pass. To use all possible data patterns 32 passes are

required. This test is quite effective at detecting data sensitive errors, but the execution time is long.

Random number sequence

This test writes a series of random numbers into memory. The initial pattern is checked and then complemented and checked again on the next iteration. However, unlike the moving inversions test, writing and checking can only be done in the forward direction. On the first pass, a fixed seed number is used so that the random number generator always generates the same sequence of numbers, allowing the test run to be reproducible. All subsequent passes use a seed number generated from the system clock, resulting in more permutations being tested.

The 64-bit and 128-bit versions of this test are essentially the same as the original 32-bit test, except that it uses native 64-bit and SIMD instructions respectively.

Modulo 20, random pattern

Using the Modulo-X algorithm should uncover errors that are not detected by moving inversions due to cache and buffering interference with the algorithm. A sequence of 6 32-bit random patterns are used.

Bit fade test, 2 patterns

The bit fade test initializes all of memory with a pattern and then sleeps for 5 minutes (or a custom user-specified time interval). Then memory is examined to see if any memory bits have changed. All ones and all zero patterns are used.

Row Hammer Test

The row hammer test exposes a fundamental defect with RAM modules 2010 or later. This defect can lead to disturbance errors when repeatedly accessing addresses in the same memory bank but different rows in a short period of time. The repeated opening/closing of rows causes charge leakage in adjacent rows, potentially causing bits to flip.

This test 'hammers' rows by alternatively reading two addresses in a repeated fashion, then verifying the contents of other addresses for disturbance errors. For more details on DRAM disturbance errors, see *Flipping Bits in Memory Without Accessing Them: An Experimental Study of DRAM Disturbance Errors* by Yoongu Kim et al.

Starting from MemTest86 v6.2, potentially two passes of row hammer testing are performed. On the first pass, address pairs are hammered at the highest possible rate. If errors are detected on the first pass, errors are not immediately reported, and a second pass is started. In this pass, address pairs are hammered at a lower rate deemed as the worst-case scenario by memory vendors (200K accesses per 64ms). If errors are also detected in this pass, the errors are reported to the user as normal. However, if only the first pass produces an error, a warning message is instead displayed to the user.

DMA Test

The DMA test exercises the DMA subsystem to initiate memory transfers without CPU intervention. This test is

designed to detect memory errors that are exposed during DMA-based memory accesses initiated by peripherals such as mass storage devices (eg. hard drives).

This test first initializes the contents in a scratch partition in the MemTest86 USB flash drive by performing a DMA-based transfer from memory to disk. Once initialized, the data is verified by performing multiple iterations of DMA-based transfer from disk back to memory. An error is detected If there are any data mismatches between what was written and read from disk.

A.3 Error Reporting

A.3.1 Memory Errors

When the tests are running, individual errors are reported which includes the following details.

Field	Description
Test:	Test number
Addr:	Failing memory address
Expected:	Expected data pattern
Actual:	Failing data pattern

A.3.2 ECC Errors

When ECC detection is enabled, the following error details are reported when ECC errors are detected. Some fields may not be available depending on the memory controller on the chipset.

Field	Description
Test:	Test number
Addr:	Memory address of the detected ECC error
(Col,Row,Rank,Bank):	The rank, bank, row, and column address of the detected ECC error.
ECC Corrected:	Whether the ECC error has been corrected or not
Syn:	Represents the "ECC syndrome" value. When a 64-bit word is written to RAM, seven ECC bits are computed. When the same word is re-read the ECC bits are recalculated. Then an exclusive OR is done on the ECC bits to determine if there has been an error. A zero result means no error. A non-zero result indicates an error and the syndrome value can be used to determine the actual bit that was in error. Consult the memory controller's chipset documentation for the ECC syndrome table to determine the exact bit in error.
Channel/Slot:	The channel and slot number of the DIMM stick where the ECC error was detected

A.4 SPD.spd file specifications (Pro version only)

The SPD. spd file contains the raw bytes to be compared with the collected SPD data when the configuration file parameter **SPDMATCH=1**. The format specifications are as follows:

- ASCII text format
- Maximum 512 bytes
 - If the number of bytes is less than the size of the SPD data, only those bytes shall be compared with the SPD data.
 - If the number is greater, the check shall fail
- Only hex and '?' wildcard characters allowed, in pairs to represent a single byte
 - If '?' is specified for a nibble, it will match any value for the corresponding nibble in the SPD data

Example

Given the following truncated SPD.spd file:

```
23 10 0C ?? AA BB CC DD EE FF 11 22 33 44 55 66 ...
```

The following SPD bytes shall match:

```
23 10 0C 00 AA BB CC DD EE FF 11 22 33 44 55 66 ...
```

However, the following SPD bytes shall not match:

```
23 10 0C 00 AB BB CC DD EE FF 11 22 33 44 55 66 ...
```

A.5 Custom test definitions (Pro version only)

By default, the list of tests described in Individual Test Descriptions compose the test suite to be executed for any given test session. The execution order, test patterns and number of iterations for these tests were designed to detect the most obvious errors quickly.

However, there may be non-standard test scenarios that require running an existing test algorithm with a specific test pattern, cache configuration, and/or number of iterations. MemTest86 supports custom configuration of existing test algorithms to support such test scenarios.

Note: Overriding the default tests is not recommended for novice users as it may reduce the test coverage and erroneously produce a PASS result for faulty RAM modules. Override default tests at your own risk.

To enable custom test definitions, the **TESTCFGFILE=<test-config-filename>** configuration file parameter is set to the name of the *custom test definitions file*. The *custom test definitions file* defines a list of comma-separated values formatted as follows:

```
# Format:
# <test type>, <pattern>, <iter count>, <cache enable>, <test name>
# <test_type> can be one of :
# ADDRWALK1 - Address Test, Walking ones
  ADDROWN - Address Test, Own address
# MOVINV8 - Moving inversions, 8-bit
  BLKMOV - Block move
#
  MOVINV32 - Moving inversions, 32-bit
#
  RNDNUM32 - Random Number, 32-bit
#
   MOD20 - Modulo 20
   BITFADE - Bit fade test
#
   RNDNUM64 - Random number, 64-bit
#
   RNDNUM128 - Random number, 128-bit
   HAMMER - Hammer test
# <pattern> can be a hex value or:
  PAT_RAND - random pattern
#
  PAT WALK01 - walking 0/1 patterns
#
#
  PAT DEF - default pattern for the specified test type
# <iter_count> can be any positive integer or:
  ITER_DEF - test default
#
# <cache enable> can be one of:
  CACHE EN - cache enabled
  CACHE DIS - cache disabled
  CACHE_DEF - global default cache settings
#
# <test name> is a string describing the test
```

An example custom test definitions file, customtests.cfg, is as follows. To enable the custom tests, **TESTCFGFILE=customtests.cf**g must be specified in the mt86.cfg file

ADDRWALK1, PAT_DEF, ITER_DEF, CACHE_DIS, "Address test, walking ones, cache off" MOD20, PAT_WALK01, 1, CACHE_EN, "Modulo 20, walking 0/1, cache on" MOVINV32, PAT_DEF, ITER_DEF, CACHE_EN, "Moving invs 32b, rand pattern, cache on" MOVINV8, 0x55555555, ITER_DEF, CACHE_DIS, "Moving invs 8b, 0x55555555, cache off"

A.6 Blacklisting RAM Pages

Several operating systems allow the user to pass in a *blacklist* of 'bad' memory ranges to block the operating system from using or allocating memory in that range. This is useful for cases where the RAM in the system fails predictably on the same set of memory addresses. By masking known faulty addresses, the system may temporarily be able to boot into the operating system to perform backup and additional diagnostics, where it would otherwise crash during the boot process.

Note that masking faulty memory addresses does not fix defective RAM but provides a temporary workaround for allowing the system to boot, especially in the case of soldered memory that cannot be easily replaced. Faulty memory **should always** be replaced, if possible.

A.6.1 Linux BadRAM

Most newer Linux kernels (eg. Ubuntu 12.04 or newer) support BadRAM, which allow a blacklist of memory address & mask patterns to be passed in as a GRUB2 boot-time parameter. This work-around makes it possible for Linux to reliably run with defective RAM. For history and background information on the original BadRAM project by Rick van Rein, see the following page: http://rick.vanrein.org/linux/badram/

A.6.1.1 How to blacklist RAM regions

MemTest86 Pro (v9 or later) supports automatic generation of BadRAM string patterns from detected errors in the HTML report, that can be used directly in the GRUB2 configuration without needing to manually calculate address/mask values by hand.

To enter the address ranges to blacklist manually, do the following:

1. Edit /etc/default/grub and add the following line:

```
GRUB_BADRAM=addr,mask[,addr,mask...]
```

where the list of addr,mask pairs specify the memory range to block using address bit matching Eg. GRUB_BADRAM=0x7ddf0000,0xffffc000 shall exclude the memory range 0x7DDF0000-0x7DDF4000

2. Open and terminal and run the following command

```
sudo update-grub
```

3. Reboot the system

A.6.1.2 How to view blacklisted RAM regions

To view the memory regions that have been blacklisted, do the following:

1. Open and terminal and run the following command

```
sudo cat /proc/iomem
...
7ddf0000-7ddf3fff : RAM buffer
```

A.6.2 Windows badmemorylist

For Windows Vista and later, the *blacklist* of known 'bad' memory ranges can be passed in via the Boot Configuration Data (BCD) system store. This is part of the Windows Hardware Error Architecture (WHEA) which performs Predictive Failure Analysis (PFA) for ECC memory. For details of this feature, see the following page: https://docs.microsoft.com/en-us/windows-hardware/drivers/whea/persistence-of-pfa-results

Note: Since Windows 10 2004, the blacklisted memory pages may no longer be recognized due to a possible bug. This is described in this post here:

https://answers.microsoft.com/en-us/windows/forum/all/starting-with-windows-10-2004-the-pfa-memory-list/4148df72-851d-4618-8181-d785d802c8c7

A.6.2.1 How to blacklist RAM pages

MemTest86 Pro (v9 or later) supports automatic generation of badmemorylist command strings from detected errors in the HTML report that can be pasted directly in the Command Prompt without needing to manually calculate page numbers by hand.

To enter the page numbers to blacklist manually, do the following:

- 1. Open the Command Prompt (as Administrator) either from Windows or System Recovery options
- 2. Run the following command to enable memory blacklisting:

```
bcdedit /set {badmemory} badmemoryaccess no
```

3. Run the following command to blacklist the faulty page frame numbers (PFN):

```
bcdedit /set {badmemory} badmemorylist PFN1 [PFN2 PFN3 ...] where the list of PFN values specify individual page numbers to block
```

Eg. bcdedit /set {badmemory} badmemorylist 0xA1 0xB8 0xB9 shall exclude the memory ranges 0xA1000-0xA1FFF, 0xB8000-0xB9FFF

Note: Windows Memory Diagnostics can also overwrite or delete the entire PFN list without notifying the user. And at least in some cases Windows Memory Diagnostics might run as a background scheduled task in Windows.

A.6.2.2 How to view blacklisted RAM pages

To view the list of page numbers that have been blacklisted, do the following:

- 1. Open the Command Prompt (as Administrator) either from Windows or System Recovery options
- 2. Run the following command to display the list of blacklisted pages:

```
bcdedit /enum {badmemory}
```

3. Alternatively, you may use the **RAMMap** tool from Microsoft.

A.6.2.3 How to clear blacklisted RAM pages

To clear the list of page numbers that have been blacklisted, do the following:

- 1. Open the Command Prompt (as Administrator) either from Windows or System Recovery options
- 2. Run the following command to clear the list of blacklisted pages:

bcdedit /deletevalue {badmemory} badmemorylist

Appendix B. Product Support

Please report problems to:

Email: help@passmark.com

Please include:

- The software version.
- A detailed description of the problem and how to reproduce it.
- A copy of the result files / log files (if available).
- Details of how we may be able to contact you.

B.1 Known Problems

MemTest86 cannot diagnose many types of PC failures. For example, a faulty CPU that causes Windows to crash will most likely just cause MemTest86 to crash in the same way.

With some PC's MemTest86 will just die with no hints as to what went wrong. Without any details it is impossible to fix these failures. Fixing these problems will require debugging on your part. There is no point in reporting these failures unless you have a Linux system and would be willing to debug the failure.

MemTest86 supports all types of memory. If fact the test has absolutely no knowledge of the memory type nor does it need to. This is not a problem or bug but is listed here due to the many questions about this issue.

B.1.1 UEFI

MemTest86 depends on the services provided by the UEFI firmware, which include mouse/keyboard support, multiprocessor services, file input/output, and PCI device management. Because the services that are provided by the firmware are developed individually by the motherboard manufacturers, there may be functional differences that can limit or prevent the proper operation of MemTest86. Some of these issues are highlighted below:

- Some UEFI implementations do not provide full mouse support, preventing the use of the mouse in MemTest86. If this is the case, use the keyboard or try updating to a new firmware build.
- Multiple CPU testing may not be available due to limited or non-functional multiprocessor services provided by UEFI, especially for older firmware. This may cause a reduced number of processors available for testing, or even program freeze when attempting to run on other processors. If this is the case, run in single CPU mode or try updating to a new firmware build. There is a blacklist.cfg file that contains a list of baseboards that are known to have issues running MemTest86. Adding a baseboard to the list may allow MemTest86 to run, albeit with limited functionality. See *Baseboard Blacklist File* (blacklist.cfg) for details on how to use the file.

MemTest86 is also inherently limited by the UEFI environment and as such, gives rise to the following limitations:

MemTest86 USB flash drives cannot be read in Windows XP (32-bit) due to its lack of support of GPT

disks

- MemTest86 cannot remap itself to different portions of memory in order to run tests in the section of memory it was occupying.
- Dual UEFI entries may be present in UEFI BIOS as boot devices. There is no difference in selecting either entry. This is due to a workaround that allows MemTest86 USB flash drives to be accessible in Windows.

B.1.1.1 Baseboard Blacklist File (blacklist.cfg)

There is a file (blacklist.cfg) that contains a list of baseboards that are known to have firmware issues that prevent MemTest86 from functioning properly. This file is loaded on startup and the list is scanned to see if there is a match with the system baseboard. If there is a match, the MemTest86 functionality shall be restricted accordingly. Without imposing the restriction, there may be a chance that MemTest86 may not run at all. The following is a snip-bit of the blacklist.cfg file:

```
"Mac-F42C88C8", ALL, EXACT, RESTRICT_STARTUP
"80AF", ALL, EXACT, RESTRICT_MP
"Z97MX-Gaming 5", ALL, EXACT, RESTRICT_MP
"Z170MX-Gaming 5", ALL, EXACT, RESTRICT MP
```

Each blacklisted baseboard is stored on a separate line with the following format:

<baseboard>,<BIOS version>,<exact|partial match>,<restriction flags>

- Spaseboard
 is the case-sensitive baseboard string in double quotes
- <BIOS version> is the first BIOS version (string in double quotes) that no longer exhibits the issue. If
 no fix is available, specify ALL
- <exact|partial match> determines whether exact or partial matching is used on <baseboard string>.
- <restriction flags> determines the restriction policy to impose if there is a match. This can be one
 of the following values:
 - RESTRICT STARTUP Display a warning message before MemTest86 boots
 - RESTRICT_MP Do not perform the multiprocessor test during startup, and set the default CPU mode to SINGLE
 - DISABLE MP Completely disable multiprocessor support, restricting the CPU mode to SINGLE only
 - DISABLE_CONCTRL Disable console control protocol, which may be needed for some older systems (eg. iMac 7.1)
 - FIXED_SCREENRES Do not modify the default screen resolution, which is known to cause issues on some Lenovo systems
 - RESTRICT_ADDR Set the lower address limit to 0x100000 by default, which may be needed for some Mac systems (eg. Late 2013 27" iMac)
 - TEST12_SINGLECPU Run Test 12 in SINGLE CPU Mode, which may be necessary to work around CPU threads hanging in PARALLEL mode
 - DISABLE_LANG Disable language support and font installation, which is known to cause issues on some Dell systems

B.2 Enhancements

Please send enhancement requests to:

info@passmark.com

All requests will be considered, but not all can be implemented

Appendix C. Change Log

Changes in v11.2 (Build 2000) (Feb/2025)

Fixes/Enhancements

- Added new config file parameter REPORTPREPEND for prepending the report filename with a userspecified custom string
- Fixed exception due to buffer overflow when saving DIMM results to a BMP file when the system contains a single DIMM slot
- Added preliminary ECC/address decode/memory timings support for AMD Zen 5 Turin (Family 1A, Model 0-1F) and Granite Ridge (Family 1A, Model 40-4F)

Changes in v11.2 (Build 1000) (Feb/2025)

Fixes/Enhancements

- Extended REPORTPREFIX config file parameter to support additional values, RAMSN and MACADDR, for prepending the RAM serial number or MAC address, respectively, to the report filename
- Filenames are now appended with a pseudorandom value to prevent collision when files from multiple PXE clients are simultaneously uploaded to the PXE server
- Added preliminary ECC support for AMD Zen 5 Kraken Point (Family 1A, Model 60-6F) chipsets
- Added preliminary address decode support for AMD Zen 5 Kraken Point (Family 1A, Model 60-6F) chipsets
- Added preliminary timings support for AMD Zen 5 Kraken Point (Family 1A, Model 60-6F) chipsets
- Added preliminary ECC injection support for Intel Arrow Lake/Lunar Lake
- Added support for reporting CPU socket number corresponding to detected ECC error
- Added support for obtaining CPU information for the following chipsets:
 - Intel Lunar Lake
 - Intel Granite Rapids
 - Intel Sierra Forest
 - Intel Emerald Rapids
 - AMD Ryzen Zen 5 (Family 1A)
- Improved accuracy of reported memory speed for overclocked AMD Zen 4 chipsets
- Fixed DDR5 temperatures not being obtained on AMD chipsets
- Fixed DDR4 temperature not being obtained by relaxing validity check of raw data
- Fixed incorrect reporting of ECC error DIMM slot on Intel Emerald Rapids chipsets
- Fixed address decoding reporting incorrect failure module for 1R DDR5 modules on Intel Meteor Lake/Arrow Lake chipsets
- Fixed address decoding reporting opposite failure slot for 2R DDR5 modules on Intel Meteor Lake/Arrow Lake chipsets
- Fixed incorrect memory timings reported on Intel Haswell chipsets

- Fixed incorrect CPU cache information obtained for ARMv8 chipsets
- Fixed halt when attempting to use non-existent HPET timers on ARM systems
- Fixed invalid characters appearing in the RAM config line in the test screen when SPD/SMBIOS info is not available
- Fixed incorrect DIMM graphic being displayed for CSODIMM modules in the DIMM results screen
- Added ASUS Vivobook S 15 ARM laptop to blacklist to prevent changing of the screen resolution
- Updated localization strings according to the MS Localization Style Guide for Trad-Chinese, Simp-Chinese and Japanese (courtesy of Nagisa)

Changes in v11.1 (Build 1000) (Oct/2024)

Fixes/Enhancements

- Improved performance and robustness of using non-default caching policy. This improves UI performance and fixes system halt issues with certain systems.
- Added support for additional caching policies in the main menu and MEMCACHE config file parameter
- Extended SKIPDECODE config file parameter to apply to LPDDR4/LPDDR5 modules
- Updated UEFI libraries to edk2-stable202405 (see https://github.com/tianocore/edk2/releases for details)
- Fixed incorrect test name for test 9 from "ones & zeros" text to "random pattern"
- Fixed multi-core issues on ARM64 chipsets due to unset mask interrupt bit for the ARMv8 performance counter register
- Fixed incorrect slot being identified when ECC errors are detected on Intel Coffee Lake chipsets
- Added address module decoding support for AMD Zen 3 chipsets
- Added workaround when displaying DIMM test results to match the physical slot layout of various consumer Intel Meteor Lake motherboards
- · Fixed incorrect channel mode, speeds and timings reported for multi-socket Intel Skylake-SP chipsets
- Fixed incorrect memory timings reported for Intel Emerald Rapids-SP chipsets
- Fixed incorrect reporting of memory timings and channel mode on multi-socket systems
- Fixed incorrect memory speed reported for Intel Sandy Bridge chipsets
- Fixed incorrect memory speed reported for Intel Rocket Lake/Ice Lake/Tiger Lake/Alder Lake chipsets
- Added support for reporting of LPDDR5-specific SPD attributes
- Updated Japanese translations in localizations file (courtesy of Nagisa)

Changes in v11.0 (Build 1000) (Jun/2024)

New Features

 Added new configuration file parameter CHECKMEMSPEED for verifying whether the configured memory speed is consistent with one of the SPD profiles or an arbitrary minimum speed specified by the user. If this check fails, an error message is displayed and the memory test will not start.

- Added new configuration file parameter TCPREQUESTLOCATION for specifying the URL request path (and cloud API key) for PassMark Management Console integration
- Added new configuration file parameter TCPGATEWAYIP for setting the default gateway route IP address to allow for connections outside the local network for PassMark Management Console integration
- Added new configuration file parameter SPDREPORTEXTSN for specifying whether to use the module's extended, 18-digit serial number or standard 8-digit JEDEC serial number in reports. The extended serial number encodes additional manufacture information (including the manufacture ID, date and location).
- Added new configuration file parameter DISABLESPD for disabling SPD collection. This is a workaround
 to prevent throttling of memory speeds resulting in increased test times. This occurs when reading SPD
 data interferes with the chipset's Closed-Loop Thermal Throttling (CLTT) mechanism.
- Added new configuration file parameter TSODPOLL to enable/disable polling of DIMM temperature sensors (if available)
- Preliminary address module decoding support for Intel Meteor Lake/Arrow Lake chipsets
- Support for collecting memory timings periodically during the test session. When the test completes, the lowest/highest memory speeds are reported.
- Added support for reporting AMD EXPO profiles in DDR5 SPD

- Added TLS support for PassMark Management Console integration
- Added DNS support for PassMark Management Console integration
- Added support for new DDR5 form factors "CDIMM", "CSODIMM" and "CAMM2" for CHIPMAP configuration file parameter. This is to support the new clocked (CUDIMM/CSODIMM) and compact (CAMM2/LPCAMM2) DDR5 form factors supported by newer chipsets (eg. Intel Arrow Lake)
- Increased maximum string length of chip labels to 6 for CHIPMAP configuration file parameter. This is to support longer names used in CUDIMM, CSODIMM and CAMM2 component labels such as "DAROBO".
- Fixed bug in address module decoding on Intel Comet Lake chipsets
- Fixed incorrect channel mode detection for the following chipsets:
 - o AMD Ryzen
 - Intel Coffee Lake
 - Intel Comet Lake
 - Intel Ice Lake
 - Intel Rocket Lake
 - Intel Tiger Lake
 - Intel Elkhart Lake
- Fixed incorrect memory timings detection for the following chipsets:
 - AMD Ryzen
 - Intel Meteor Lake
 - Intel Arrow Lake

- Intel Ice Lake-SP
- Intel Emerald Rapids-SP chipsets
- Fixed incorrect clock speed detection for the following chipsets:
 - Intel Rocket Lake
 - Intel Ice Lake
 - Intel Tiger Lake
 - Intel Alder Lake
 - Intel Meteor Lake
 - Intel Arrow Lake
 - Intel Elkhart Lake
 - Intel Ice Lake-SP
 - Intel Emerald Rapids-SP
- Preliminary support for obtaining memory settings for the following AMD chipsets:
 - o AMD K8
 - AMD K10
 - AMD Bulldozer
 - AMD Piledriver
 - AMD Steamroller
 - AMD Excavator
 - AMD Jaguar
 - AMD Puma
- Preliminary support for multithreading on ARM64, which was previously unavailable due to UEFI BIOS limitations
- Fixed issue with reading DDR5 SPD when the SPD page has not been reset to zero
- Fixed ECC injection option not available on AMD Ryzen Zen 3 chipsets. Note that in general ECC injection is not a feature that is normally accessible by end-users and typically requires a custom BIOS.
- Fixed In-band ECC (IBECC) capability detection on the following chipsets:
 - Intel Tiger Lake
 - Intel Alder Lake
 - o Intel Meteor Lake
 - Intel Arrow Lake
 - Intel Elkhart Lake
- Fixed ECC capability detection on Intel Ice Lake-SP and Emerald Rapids-SP chipsets
- Fixed reporting of invalid DIMM temperatures by adding checks for valid Temperature Sensor on DIMM (TSOD) raw data
- Added support for retrieving Intel Meteor Lake and Arrow Lake CPU information
- Updated Chinese and Japanese localization strings (courtesy of Nagisa)
- Updated blacklist to work around specific mainboards/BIOSes with known UEFI multithreading and other issues

Changes in v10.7 (Build 1000) (Feb/2024)

- Preliminary support for obtaining memory settings for Intel Core chipsets:
 - o 2nd gen (Sandy Bridge)
 - 3rd gen (Ivy Bridge)
 - 4th gen (Haswell)
 - 5th gen (Broadwell)
 - 6th gen (Skylake)
 - 7th gen (Kaby lake)
 - 8th gen (Coffee Lake)
 - 9th gen (Coffee Lake Refresh)
 - 10th gen (Comet Lake/Ice Lake)
 - o 11th gen (Rocket Lake/Tiger Lake)
 - 12th gen (Alder Lake)
 - 13th gen (Raptor Lake) Core chipsets
- Preliminary support for obtaining memory settings for Intel Core Ultra chipsets:
 - 1st gen (Meteor Lake)
 - 2nd gen (Arrow Lake)
 - Lunar Lake
- Preliminary support for obtaining memory settings for Intel Xeon scalable chipsets:
 - 1st gen (Skylake-SP)
 - 2nd gen (Cascade Lake-SP)
 - 3rd gen (Ice Lake-SP)
 - 4th gen (Sapphire Rapids-SP)
 - 5th gen (Emerald Rapids-SP)
- Preliminary support for obtaining memory settings for Intel Atom X Series (Elkhart Lake) chipsets
- Preliminary ECC support for the following Intel chipsets:
 - 10th gen core (Ice Lake)
 - 1st gen core ultra (Meteor Lake)
 - 5th gen Xeon scalable (Emerald Rapid)
 - Atom X Series (Elkhart Lake)
- Preliminary support for module decoding for Intel 10th gen core (Ice Lake) chipsets
- Added support for reporting various ECC error types (eg. IBECC/Scrub)
- Fixed rounding of DDR5 latency timings
- Fixed offsetted temperatures for AMD 19h family chipsets
- Suppress CPU errors due to UEFI firmware issues once already displayed
- Display "SPD FAIL" block error message when SPDMATCH check fails after test completion
- Updated localization strings (courtesy of Nagisa)

- Updated ImageUSB to v1.5.1006
- Updated blacklist

Changes in v10.6 (Build 3000) (Oct/2023)

New Features

- Added support for CFGDEFAULT tag for multi-config files to specify the default configuration
- Added support for CFGTIMEOUT tag for multi-config files to specify the timeout in seconds

Fixes/Enhancements

- · Fixed possible divide by zero error when displaying file system info of attached disks
- Fixed system address to UMC decoding for AMD Ryzen chipsets
- Fixed incorrect transfer speed obtained for Alder Lake/Raptor Lake chipsets

Changes in v10.6 (Build 2000) (Aug/2023)

New Features

• Extend CHIPMAP configuration parameter to support arbitrary strings up to 4 characters. For backwards compatibility, chip names that are non-negative numbers shall be prepended with "U".

Fixes/Enhancements

- Fixed CPU clock "MHz" cutoff in test screen
- Fixed report summary screen displaying invalid elapsed time and CPU temperatures
- Fixed text cutoff due to long strings for certain languages
- Fixed DIMM temperature text cutoff in test screen for certain languages

Changes in v10.6 (Build 1000) (Aug/2023)

New Features

- Added 'SPDREPORTBYELO' and 'SPDREPORTBYTEHI' configuration parameter for specifying the SPD byte range to display in the HTML report
- Implemented workaround for reading DDR5 SPD when SPD write disable (SPDWR) is set for Intel chipsets
- Added DIMM/IC decoding support for AMD Phoenix (19h 74h) chipsets

- Added support for chipsets with up to 12 memory controllers
- Fixed hang due to reading non-existent MSR registers for AMD 19h 60-6fh chipsets
- Fixed channel decoding for AMD Ryzen Zen 2/4 chipsets
- Fixed incorrect memory clock reported for Intel Alder Lake/Rocket Lake chipsets
- Fixed incorrect memory clock reported for AMD 19h 60-6fh chipsets

- Fixed incorrect CPU temperature reported for EPYC 7003 series chipsets due to temperature offsets
- Fixed DIMM temperature read failure after reading SPD for certain DDR5 modules
- Added reporting of additional DDR5 SPD attributes
- Fixed hang due memory allocation issues for Intel Skylake/Kaby Lake chipsets
- Added ECC support for additional Intel Skylake-SP chipset variants
- Added workaround for hang when obtaining list of benchmark results
- Perform cache invalidation before start of the RAM benchmark test to fix result inconsistencies
- Fixed text being unaligned when containing full-width characters
- · Updated localization strings
- Updated blacklist

Changes in v10.5 (Build 1000) (Jun/2023)

New Features

- Added support for displaying and reporting configured RAM settings for supported chipsets. This includes clock speed, timings, channel mode and voltages.
- Added support for multiple configurations in a single configuration file. If more than 1 configurations are found, the user is prompted to select a configuration
- Added support for displaying and reporting DDR5 XMP 3.0 SPD profiles

- Display configured RAM settings in test screen. Previously, static memory parameters from SPD/SMBIOS were displayed which were not necessarily the actual configured parameters.
- Include list of all supported SPD profiles (eg. JEDEC, XMP) in reports
- Changed units from MHz to MT/s when referring to DRAM transfer rate (typically double the clock speed for DDR RAM)
- Reduced the execution time of hammer test by increase minimum segment size per thread from 128MB to 512MB
- Reduced the execution time of hammer test by reducing the maximum number of memory segments to hammer from 64 to 32
- Fixed crash when running the Block Test RAM benchmark
- Added ECC support for Intel Raptor Lake chipsets
- Added DIMM temperature support for Intel Broxton chipsets
- Extended DIMM decoding support for additional Alder Lake and Raptor Lake chipset variants
- Fixed disabling of hyperthreads for CPUs with hybrid cores
- Fixed display of negative CPU temperatures
- Fixed display of negative RAM temperatures
- Fixed inconsistent slot name in DIMM results screen
- Fixed text being truncated in DIMM results screen
- Fixed DIMM error count reporting for 2-slot motherboards

- Fixed TCP connection to management console being refused for certain Apache configurations
- Fixed sending corrupted TCP status XML data to management console
- Fixed error in saving report files due to invalid characters in the file name
- Updated blacklist

Changes in v10.4 (Build 1000) (Apr/2023)

New Features

- Added preliminary support for Ryzen Zen 4 DDR5 chip decoding
- Revised criteria for determining the final result of a memory test
 - o PASS All configured tests were completed without any errors detected
 - FAIL All configured tests were completed with at least one error was detected or MAXERRCOUNT is exceeded at any point of the test
 - INCOMPLETE PASS At least one of the configured tests was not completed but no errors were detected
 - INCOMPLETE FAIL –At least one of the configured tests was not completed and at least one error was detected
- Revised criteria for determining the test result of individual modules
 - PASS All configured tests were completed and no errors were detected on the module without any undecoded errors
 - FAIL All configured tests were completed with at least one error detected on the module
 - INCOMPLETE PASS At least one of the configured tests was not completed but no errors were detected on the module without any undecoded errors
 - INCOMPLETE FAIL –At least one of the configured tests was not completed and at least one error was detected on the module
 - UNKNOWN No errors were detected on the module but there was at least one undecoded error

- Added preliminary implementation of ECC injection for Ryzen Zen 4 chipsets
- Fixed module decoding for DDR4 x16 modules
- Display ECC error count in message after completing a test pass
- Fixed incorrect calculation of DDR5 SPD memory bandwidth
- Added additional columns to module result table in HTML report
- Removed "Go back to menu" option from the test menu
- Included '# Tests Completed' in HTML report

Changes in v10.3 (Build 1000) (Mar/2023)

New Features

- · Added preliminary support for Ryzen Zen 4 DDR5 module decoding
- Added support for TCP/IP connection to management console
- Added 'INCOMPLETE' result in cases where not all tests complete but no errors are detected
- Added temperature to deprecated DIMMS in HTML report
- Added ECC support for IBECC polling for Tiger Lake Chipsets
- Added IBECC enable mode to main menu
- Added additional options for SKIPDECODE config parameter to skip based on DDR type

Fixes/Enhancements

- Added ECC support for Ryzen zen 4 (60h-6fh)
- Fixed Intel Raptor Lake model numbers
- Fixed ECC support for Intel Tiger Lake H and UP3
- Fixed decode UI layout for DDR4 SO-DIMM 1Rx8
- Fixed IBECC capability detection for Tiger Lake chipsets
- Added ECC channel/slot remap workaround for H12SSL-NT
- Added serial number of failing DIMMS in HTML/XML reports
- Added DIMM S/N in per DIMM error table in HTML report
- include error count for all DIMMs on test failure in HTML/XML report
- Fixed rank/chip width detection on Intel Tiger Lake chipsets
- Fixed CS hash decoding on Ryzen Zen 2/Zen 4 chipsets
- Changed 'EXACTSPDS' configuration parameter to accept an array of values
- · Increased AP core wait time if memory error was detected
- Added workaround for UEFI firmware being unable to return correct rendered text dimensions
- Fixed freeze on some UEFI firmware when attempting to enable AP cores during MP init
- Fixed potential boot issues on MSI Ryzen motherboards
- Fixed bug in parsing DDR5 SDRAM Density Per Die resulting in incorrect module size
- Fix premature AP timeout in parallel mode due to reporting memory errors
- Fix slot mapping of memory errors for Ryzen AM4 boards
- Fix bug in determining unknown slot errors when there are consecutive errors for the same address
- Fix '# Logical Processors' not appearing properly in XML file
- reduce verbosity of SPD/TSOD SMBus logs

Changes in v10.2 (Build 1000) (Dec/2022)

New Features

- Added DIMM and IC decoding for Intel 13th generation Raptor Lake processors
- Added ECC support for Intel Skylake-E on HPE platforms

- Added support for retrieving DDR5 SPD on Intel Raptor Lake-S
- Added support for retrieving DDR5 SPD on AMD Ryzen chipsets
- Added 'SKIPDECODE' configuration parameter to skip the decode results screen after completion of tests (Pro/Site Editions)

Fixes/Enhancements

- Modify CHIPMAP config param to include form factor attribute (e.g. SODIMM, DIMM, etc.)
- Fix bug applying valid CHIPMAP configurations (when # of CHIPMAP entries is < 7)
- Include DIMM rank/chip width in HTML report
- Include DIMM/chip errors in XML file to PXE server
- Fix UI display of SODIMM chip errors
- Fix UI display of DIMM x16 chip errors
- Fix buffer overrun and type overflow in parsing of localization strings
- Fix of SPD channel/slot assignment for Intel E5 v3 chipset
- Fix handling of measuring text width for empty strings causing problems on older systems (e.g. Sandy Bridge-E)
- Fix DIMM result screen to handle boards with unused MC slots (e.g. Q670EI-IM-A)
- Fix SODIMM chip ordering in the result screen
- Include unknown DIMM/chip errors in HTML/PXE reports

Changes in v10.1 (Build 1000) (Nov/2022)

New Features

- Added initial support for Raptor Lake, Tremont and Sapphire Rapids chipsets
- Modified CHIPMAP config file parameter to support multiple DIMM configurations (eg. DDR4|DDR5, x8|x16, 1R|2R, 8GB|16GB)
- Added DIMM and IC decoding for Intel 8th, 9th, 10th and 11th generation processors (Pro/Site editions).

- Fixed ECC channel/slot error details not displaying correctly
- Added "Un-decoded" errors to results screen
- Updated CPU cache speed values to 64bit to prevent overflow errors on faster systems
- Fixed mapping of SMBIOS slot to SPD when there are duplicate serial numbers
- Fixed hyperthread detection when max number of CPU threads are limited (eg. 16 in Free edition)
- Fixed issue allowing multiprocessor cores to exceed max system cores
- Fixed issues when number of CPU cores exceed MemTest86 version's max core limit
- Fixed rounding error with DDR5 clock speed
- Fixed test selection in console only mode

Changes in v10.0 (Build 1000) (Oct/2022)

New Features

- Added new experimental memory test as Test 14 [DMA test]. This test exercises the disk controller's
 DMA hardware to perform memory access, bypassing the CPU. The motivation for this test came from
 discovering a defective RAM module that did not produce errors when accessed via the CPU, but failed
 when files were read from disk via DMA. As this test is experimental, it shall be disabled by default.
- DIMM (Pro edition)/chip-level (Site Edition) error detection on limited number of hardware platforms. This includes mid-test error reporting, graphical UI summary report on test completion and per-DIMM/chip error count table in the HTML report.
 - Added new config file parameter, 'CPUMAP', to specify the DRAM chip labeling map. By default,
 DRAM chips are labeled consecutively starting from U0 (eg. U0, U1,..., U15)

- Log file name now includes the timestamp
- Added new blacklist flag 'DISABLE_CPUINFO' for disabling CPU info collection
- Fixed 'MAXCPUS' config file parameter not being applied
- Fixed hammer test incorrectly running in single-sided mode in Free version
- · Fixed clock speed measurement failure for ARM chipsets due to cycle count register not being enabled
- Fixed detection of MAC address used as unique ID for PXE boot
- Added support for reporting IBECC errors
- · Fixed bug in reading ECC error count registers for various Intel/AMD Ryzen chipsets
- · Fixed reading ECC error status register for Intel Tiger Lake-H and Alder Lake chipsets
- Fixed ECC detection on Intel Ice Lake-SP chipsets
- Added ECC detection support for multi-socket Intel Ice Lake-SP chipsets
- Fixed ECC support for Intel Rocket Lake chipset variant
- Added ECC support for AMD Ryzen Zen 3 50h-5fh chipset
- Fixed ECC support for AMD Ryzen Zen 2 chipsets with 2 memory channels
- Fixed ECC error false positives on Intel Atom C2000 chipsets
- Added support for retrieving Intel Ice Lake-SP CPU info
- Added support for retrieving Intel Ice Lake-SP RAM SPD data
- Added support for retrieving Intel Ice Lake-SP RAM temperature data
- Added SMBus (SPD) support for Intel Alder Lake-P
- Enable SMBus on Intel 801-based chipsets if disabled
- Fixed detection of SPD modules on systems with > 8 SMBus controllers (eg. quad socket systems)
- Fixed bug in mapping SPD module index to SMBIOS slot index
- Fixed detection of SPD slot for systems with soldered and removable DIMMs

- Fixed incorrect calculation of DDR5 transfer bandwidth
- Fixed DDR5 memory type in SMBIOS not being correctly parsed
- Fixed identification of data partition in USB flash drive
- · Create 'Benchmark' directory to store RAM benchmark results if it does not already exist
- Updated blacklist

Changes in v9.4 (Build 1000) (Jan/2022)

- Added new config file parameter, 'MAXCPUS', for setting the maximum number of CPU logical cores used for testing. By default, this value is 256 (Pro Edition) and 16 (Free Version). This parameter can be set to a maximum value of 512.
- Added new config file parameter, 'AUTOPROMPTFAIL', for specifying whether to display the test result
 and ask for user intervention on test failure, even when AUTOMODE is enabled
- Added new config file naming convention allowing for separate config files depending on memory size:
 <Memory-size-in-GB>GB-mt86.cfg
- Fixed memory size calculation to use rounding instead of truncation
- Display PASS message box in yellow (instead of green) on test completion if corrected ECC errors were detected
- Display error message if no valid SPD.spd file was found when SPDMATCH=1
- Display error message if no SPD modules were detected when SPDMATCH=1
- Display error message and exit MemTest86 when failing to measure CPU clock speed during startup
- Updated XML message to include CPU info & SMBIOS info sent to PXE server/management console
- Added ECC Support for Intel Tiger Lake H chipset
- Added ECC Support for Intel Rocket Lake chipset
- Added ECC Support for Intel Alder Lake chipset
- Added ECC Support for Intel Ice Lake-SP chipset
- Added support for retrieving CPU info for Intel Elkhart Lake chipset
- Added support for retrieving DIMM temperatures (TSOD) for Intel Alder Lake chipset
- Fixed issue with measuring ARM64 CPU clock speed due to CPU cycle counter (PMCCNTR) being disabled
- Fixed HTML report to display error bit map in text when copying/pasting
- Fixed Linux badram entries in HTML report to be page size aligned (4096 bytes)
- Fixed parsing bug with SPD.spd file when whitespace appears at the end of each line
- Fixed issues with displaying RAM SPD DDR5-specific info
- Fixed support for limited number of command line parameters in Free version
- Fixed bug in overflowing text in SPD info screen

- · Fixed REPORTNUMWARN config file parameter not being written when saving config file
- Included Serva PXE server configuration file in Site Edition package
- Updated blacklist with Dell Precision 7760 screen display issues

Changes in v9.3 (Build 1000) (Oct/2021)

Fixes/Enhancements

- Support custom test definitions specified by a configuration file. A custom test definition consists of an existing test algorithm, specific test pattern, cache settings, and number of iterations. Custom test definitions are enabled by specifying the TESTCFGFILE parameter (Pro Edition only)
- Fixed incorrectly formatted XML Status/TestResult files sent to PXE/TFTP server (Site Edition only)
- Fixed incorrect reporting of error endianess for 128-bit test
- Fixed bug in displaying/logging ECC error channel/slot number
- Fixed report/log files not being saved correctly for non-standard USB flash drive installs
- Improved responsiveness of pattern string updated on screen
- Display row hammer warning, if applicable, in test completion popup message
- Fixed ECC error reporting on AMD Ryzen chipsets to include channel/slot information
- Fixed ECC error reporting on AMD Ryzen chipsets with 8 memory channels
- Improved robustness of ECC error reporting for Intel Atom C2000 chipsets
- Fixed retrieval of DDR4 SPD bytes on Intel Alder Lake chipsets
- Added support for parsing DDR3 Module Manufacturer's Specific Data
- Updated blacklist with additional Surface Pro models with display issues

Changes in v9.2 (Build 2000) (July/2021)

Fixes/Enhancements

- Added large PASS/FAIL block text to top-right corner of HTML report
- · Added visual representation of bit error mask to HTML report
- Fixed missing timestamp for ECC errors in HTML report
- Fixed incorrect version string indicating "V9.1" instead of "V9.2"

Changes in v9.2 (Build 1000) (July/2021)

- Preliminary support for retrieving and decoding DDR5 SPD data. This includes support for the new SPD HUB I²C/I3C command set.
- Support for retrieving DIMM temperatures (TSOD) for AMD Ryzen chipsets
- Fixed ECC error polling on Ryzen with multiple controllers

- Fixed ECC detection on AMD Ryzen chipsets (Family 17h Model 31h)
- Improved formatting of the Test Summary screen on test completion
- Moved "RAM Temp" to "Pattern" line to allow longer RAM info display
- · Updated blacklist with additional baseboards with known multiprocessing issues
- Refactored code for newer EFI Development Kit (EDK II) release compatibility

Changes in v9.1 (Build 1000) (May/2021)

Fixes/Enhancements

- Fixed parsing of SMBIOS memory device structure for compatibility with DDR5 DIMM data
- Fixed non-page aligned addresses for ADDRLIMLO/ADDRLIMHI configuration file parameters
- Fixed hang when running in UEFI Shell caused by improper cleanup of localization strings after an exit from a previous MemTest86 run.
- Added support for retrieving CPU info for Intel Rocket Lake chipsets
- Added support for retrieving CPU info for Intel Tiger Lake chipsets
- · Fixed misalignment of text containing full-width characters

Changes in v9.0 (Build 2000) (Feb/2021)

Fixes/Enhancements

- Fixed text disappearing in the main menu for certain boards (eg. Thinkpad)
- Fixed artifacts appearing in icons due to improper handling of transparency channel
- Restored option to set # of passes for Free version
- Fixed drawing issues in Upgrade to Pro screen when hovering mouse over sidebar
- Fixed display issues in console mode for certain boards (eg. Supermicro)
- Fixed double temperature offset being applied to certain Ryzen (AMD 17h) chipsets

Changes in v9.0 (Build 1000) (Feb/2021)

New Features

- Support UEFI-based ARM systems (arm64/aarch64), including memory test algorithms ported to ARM64 and optimized using hand-written assembly code. Special thanks to Simula eX³ project (ex3.simula.no) for providing high-end ARM64 systems for testing.
- Added BADRAM & badmemorylist formatted strings and instructions in the exported HTML report to mask defective memory addresses (Pro only)
- Revamped RAM SPD screen in the Main Menu with graphical view of all RAM slots
- Added preliminary support for DIMM temperature reporting (when supported by DIMM)

- Added option to change save location of logs/reports to another disk volume (file system)
- Added prompt on various exit options (shutdown, reboot, exit to BIOS) on application exit.
- · Added keyboard shortcut (F12) to save screenshot to file within the Main Menu
- Support for saving test results to a byte-packed, binary file for storage-limited systems
- Support for passing configuration parameters via command line arguments
- Added new config file parameter, 'EXACTSPDSIZE', to specify the total capacity of all detected SPD to match before allowing tests to begin
- Added new config file parameter, 'MEMREMMB', for specifying the minimum amount of memory to leave unallocated during testing
- Added new config file parameter, 'MINMEMRANGEMB', for specifying the minimum size of memory ranges that shall be allocated for testing
- Added new config file parameter, 'AUTOREPORTFMT', for specifying report format of auto-saved reports
- Added new config file parameter, 'PMPDISABLE', to disable TFTP uploading of XML messages for Management Console integration
- Added new config file parameter, 'RTCSYNC', to sync real-time clock with PXE server (via a periodically updated 'CurrentTime.txt' served by the PXE server)
- Added new config file parameter, 'VERBOSITY', for specifying the verbosity level of the debug output
- Added new config file parameter, 'TPL', to specify the UEFI task priority level of the MemTest86
 application

- Support for per-baseboard configuration file via baseboard-prefixed filename (eg. "Surface Promt86.cfg")
- Optimized/removed stale 32-bit code in memory tests
- Improved test coverage by alternating between ascending/descending assignment order of CPU cores between passes when running in parallel mode
- Track CPU core/thread ID of detected memory errors, and include the list of CPUs in error in test summary/report
- Added tracking and reporting of min/max/average CPU + DIMM temperatures (when supported by DIMM)
- Added SMBIOS memory device info to reports
- Modified DRAM address ECC error reporting from (Column,Row,Rank,Bank) -> (Channel,Slot,Rank,Bank,Row,Column)
- Added serial number of DIMM module experiencing ECC errors in report (supported chipsets only)
- Added channel/slot information of detected SPDs in report (supported chipsets only)
- Fixed 100% CPU usage when waiting for input in main menu
- Improved UI drawing performance for better responsiveness

- Generate beeps of Piezo Speaker on test end (if available)
- Changed to large, coloured PASS/FAIL message box on test end
- Changed to large, coloured FAIL message box on failed pre-test SPD checks
- Fixed Test 12 errors in HTML report being truncated
- · Updated blacklist to work around new UEFI bugs Apple added to their UEFI firmware
- Updated blacklist to work around Microsoft/Huawei laptops with display issues related to screen resolution
- Fixed crash on VirtualBox due to reading of non-existent MSRs
- Include system information details in TestResult XML messages to PXE Server (Site Edition)
- Display error when there is a TFTP transfer error when sending Status XML messages to PXE server (Site Edition)
- Fixed escaping of chars to XML entities when generating messages to PXE Server (Site Edition)
- Output additional lines to console during MemTest86 boot
- · Fixed detection of uncorrected ECC errors for AMD Ryzen chipsets
- Fixed ECC detection for > 2 channels for AMD Ryzen chipsets
- Fixed ECC support for multiple CPU dies for AMD Ryzen chipsets
- Fixed ECC error detection on AMD Ryzen chipsets with multiple CPUs
- Added preliminary support for AMD Ryzen ECC reporting via error count registers when PFEH is enabled
- Fixed ECC detection for Intel chipsets that use error count registers
- Added ECC support for different Intel Coffee Lake chipset variants
- Added disabling of SMI for Intel Kaby Lake chipsets to allow ECC errors to be detected
- Added ECC support for Intel Comet Lake chipsets
- Added preliminary support for decoding of system address to socket/channel/rank/bank/row/column address on Broadwell-DE. This information is logged in the log file.
- · Fixed incorrect reporting of ECC capabilities for chipsets with multiple IMCs
- Added support for retrieving CPU info for Intel Gemini Lake chipsets
- · Added preliminary support for retrieving CPU info for Intel Ice Lake chipsets
- Fixed potential unstable behaviour when increasing the target multiplier for Intel Silvermont chipsets
- Fixed enabling turbo mode on Intel Silvermont chipsets
- Updated temperature offsets for AMD Ryzen chipsets
- Added preliminary support for reading AMD Ryzen 5000 (Family 19h) chipset temperatures
- Updated EDK2 library to edk2-stable202008
- Fixed memory leak when exiting program
- Revised Portuguese translations
- Updated unifont.bin file with higher weight Russian glyphs
- Removed PassMark contact information from reports

Changes in v8.4 (May/2020)

Fixes/Enhancements

- Added new config file parameter 'CHECKMEMSPDSIZE' for checking consistency of total memory capacity of detected SPDs against system memory size
- Added new config file parameter 'SPDMATCH'. If enabled, will perform a comparison of the values contained in SPD.spd file with the actual SPD data obtained
- Memory is now reserved at the beginning and released at the end of the test session to reduce frequency of memory allocations/release and improve UI responsiveness
- Added fallback setting to best screen resolution candidate if current screen resolution is outside supported range
- Increased maximum supported screen height from 1080 to 1200
- Added tftp.remap file for fixing backslash/forward slash issues with uploading XML files when running
 TFTP server on Linux machines
- Added warning message when failing to inject ECC errors for Ryzen chipsets (due to being disabled in production)
- Added disabling of DRAM periodic and redirect scrub when performing ECC injection on Ryzen chipsets
- Added specific Mac Pro models to black list to workaround display and multiprocessing issues
- Added preliminary ECC support for Ryzen Zen 2
- Added preliminary support for retrieving CPU info for Intel Comet Lake chipsets
- Updated Russian translations (courtesy of Victor Lutz)

Changes in v8.3 (November/2019)

- Added AUTOREPORT configuration file parameter to enable/disable automatic saving of test results
 HTML report when AUTOMODE is enabled
- Added TFTPSTATUSSECS configuration file parameter to set the period to send status XML updates to TFTP server (for management console)
- Modified behaviour for detection of duplicate errors. Errors with the same address (and bits) but occur in different tests are no longer considered to be duplicate.
- Fixed hang when CPU does not support SSE4.1 instructions when running Test 12
- Fixed MINSPDS and EXACTSPDS configuration file parameters being incorrectly set when saving current configuration settings to file
- Fixed escaping of characters in XML messages to TFTP server (for management console)
- Fixed invalid XML tag in XML messages to TFTP server (for management console)
- Report is now automatically saved before the end of test prompt when AUTOMODE=2 is set in configuration file

- Fixed incorrect reference to blacklist flag 'TEST12 ONECPU' (correct flag is 'TEST12 SINGLECPU')
- Updated Russian translations (courtesy of Victor Lutz)
- Added better sanity checking for SPD bytes
- Updated JEDEC manufacture list to JEP106AZ (May 2019)
- Fixed channel mapping for Apollo Lake ECC detection
- Fixed ECC detection for certain Intel Skylake-SP chipsets

Changes in v8.2 (June/2019)

Fixes/Enhancements

- Added REPORTPREFIX configuration file parameter to specify the prefix text to use for the report files
- Added TEST12_SINGLECPU flag to blacklist.cfg to force test 12 to run in single CPU mode as a workaround for CPU threads hanging in PARALLEL mode
- Added DISABLE_LANG flag to blacklist.cfg to disable language support and font support, which is known to cause issues on some Dell systems
- Changed the blacklist.cfg RESTRICT_ADDR flag lower address limit from 0x1000 to 0x100000, as some systems experience issues when writing to the BIOS area (up to 0xFFFFF)
- Fixed bug with blacklist.cfg RESTRICT_ADDR flag not setting the lower address limit properly
- Fixed buffer overrun bugs detected by HeapGuard when measuring memory latency
- Fixed fluctuations in memory/cache speed measurements
- Fixed UI issues with System Information screen
- Changed "red" error text to "light red" for better readability
- Fixed CPU temperature readings for several AMD Ryzen chipsets
- Added reporting of Module Manufacturer's Specific Data in DDR4 SPD modules to PXE server for use with Management Console (Site Edition only)
- Fixed timing issues with retrieving SPD data on Skylake-X chipset
- Fixed decoding of DDR4 SPD Post Package Repair (PPR) (Byte 9)
- Fixed decoding of DDR4 SPD Secondary SDRAM Package Type (Byte 10)

Changes in v8.1 (January/2019)

- Added version information and total CPU threads to test summary screen
- Increased maximum number of CPU threads to 256
- · Added text colour to error messages during testing
- Added Mac Mini 2018 to blacklist which sets the lower address limit to 0x1000 by default
- Fixed bug in detection of hyperthreads when the number of CPU threads exceeds the maximum

- Fixed incorrect JEDEC manufacture names (Bank 10)
- Fixed missing RAM part number / serial number obtained from SMBIOS in HTML report
- Fixed incorrect channel/slot number for ECC errors on Skylake-SP chipsets
- Fixed bug in specifying the number of test passes for Free version

Changes in v8.0 (December/2018)

New Features

- Added ability to save/overwrite current configuration to the mt86.cfg file. This can be done under the 'Settings' screen
- Initial support for KingTiger iMS functionality. In the medium term, this will allow bad RAM addresses to be localized and removed from service, possibly fixing memory errors caused by defective RAM sticks
- Added language support for Polish
- Added new configuration file parameter CONSOLEONLY which forces MemTest86 to run using the console only (ie. no graphics). This allows for systems without graphics support (eg. serial console)
- Added new configuration file parameter SAMESPDPARTNO to check whether the part numbers of all detected SPDs match
- Added new configuration file parameter EXACTSPDS to specify the number of detected SPD modules to match before allowing the tests to begin. This parameter overrides MINSPDS if set.
- Added options to set MINSPDS and EXACTSPDS in the main menu. This can be done by selecting 'View detailed RAM (SPD) info' in the 'System Info' screen
- Improved Test 12 test coverage by alternating between temporal/non-temporal store/load intrinsics. This change allow MemTest86 to detect some previously undetectable RAM errors.
- Added support for memory error triggering and logging for logic analyzers such as Logic Analyzer Keysight U4164A. Before the test is started, the memory address of the structure where errors are logged is displayed on screen to allow for configuration of the logic analyzer. When memory errors are detected, the pattern 0xDEADBEEF and error details are written to a predefined structure. This triggering/logging mechanism is enabled via configuration file parameter TRIGGERONERR.

- Removed MemTest86 v4 (BIOS) from boot images. This means that MemTest86 will no longer be dual
 boot and UEFI is now mandatory to use new versions of MemTest86. On old machines with traditional
 BIOS, the separate stand alone V4 release will need to be used. This change was made as many users
 were confused by the dual boot setup, and accidentally booted the old V4 release on new UEFI
 systems.
- Removed MemTest86 ISO download packages. Users are encouraged to use the USB boot images which allow logs, reports and configuration files to be written to the USB drive. If CD boot is required, please use ISO images from MemTest86 v7 or earlier.
- Consolidated download packages for Windows and Linux/Mac into one zip file
- Increased size of partitions in the boot images to 256MB

- Fixes to allow Memtest86 to be installed permanently in firmware by motherboard vendors
- Fixed system hang when disabling cache on CPU threads
- Memory ranges less than 1MB are no longer reserved for Bit fade test/Hammer test due to possible memory conflict issues
- (Site Edition only) Changed management console report period from 3 min to 1 min. Removed reporting after the completion of every test.
- Added periodic resetting of watchdog timer for iPXE workaround
- Limited the maximum number of passes in the Free version to 4
- Fixed FAIL result in generated HTML report when testing was aborted without any errors.
- · Added timestamp to the list of errors in the HTML report
- Fixed misaligned progress bar when running RAM benchmark test
- Updated to UDK2018
- · Added CPU/SPD/ECC support for Hygon Dhyana chipsets
- Updated JEDEC RAM manufacture ID list (JEP106AX)
- Added SMBus (SPD) support for Intel Cannon Lake SMBus.
- Added SMBus (SPD) support for unknown Intel SMBuses
- Added ECC detection support for Intel Atom C3000 chipsets
- Added ECC detection and injection support for Intel Coffee Lake chipsets
- Added ECC detection and injection support for AMD Ryzen (10h-1fh) chipsets
- Fixed ECC detection support for Skylake-SP
- Fixed ECC error channel/slot number determination for Skylake-SP
- Fixed bug in reporting of ECC capabilities for Ryzen chipsets
- Fixed Ryzen CPU temperature readings for 26xx/27xx/29xx
- Added workaround for console mode not working for laptops with hi-res screens
- Added iMac14,2 to blacklist which set the lower address limit to 0x1000 by default
- Added ROG STRIX X370-F GAMING (BIOS version 4012) to the blacklist as first BIOS version that doesn't require blacklisting

Changes in v7.5 (Jan/2018)

- Added check for whether the number of errors exceed a maximum error count. If so, the tests are aborted. This can be configured via the configuration file parameter MAXERRCOUNT. By default the value is 10000
- · Added support for Russian language
- Added new configuration file parameter EXITMODE for specifying whether to shutdown or reboot the system on exit

- Added support for reporting to Management Console
 (https://www.passmark.com/products/bitmgtconsole.htm) via XML messages over TFTP (Site Edition only). The status of MemTest86 is periodically reported to the management console
- Added new configuration file parameter TFTPSERVERIP for specifying a different TFTP server IP address for sending report files and reporting to the management console (Site Edition only)
- Added workaround for retrieving configuration files from TFTP servers that don't support the 'get file size' TFTP command (Site Edition only)
- Added workaround for Serva bug when overwriting a file on the TFTP server (Site Edition only)
- Fixed bug with generated HTML/XML files that require character escaping
- Added workaround when firmware EFI_GET_TIME function fails to retrieve the time correctly. A
 warning is also written to the log file
- Added new flag DISABLE_CONCTRL to blacklist for console control workarounds for older firmware
- Fixed 'ALL' BIOS versions not being parsed properly in blacklist
- Updated blacklist.cfg file with additional baseboards with known issues
- Added more robust detection of CPU hyperthreads
- · Added ECC detection support for Intel Skylake-SP chipsets
- Added ECC detection/injection support for AMD Ryzen chipsets
- Added warning message to log file when ECC injection is locked on Atom C2000 chipsets
- Fixed bug with ECC error reporting on Intel Xeon E3 chipsets
- Fixed CPU temperature not being shown for Intel Apollo Lake, Skylake-X and Broadwell-E chipsets
- Added preliminary support for retrieving CPU info for Intel Cannon Lake/Knights Mill chipsets
- Fixed bug with retrieving the number of boosted P-states in AMD chipsets
- Fixed CPU temperature not being read properly on AMD 15h (model >= 40h) chipsets

Changes in v7.4 (July/2017)

- Added new file blacklist.cfg that contains a list of baseboards that have known MemTest86 boot issues
- Added 'CONSOLEMODE' config file parameter for specifying the mode of the UEFI console. Setting the
 console mode determines the resolution of the console (with 0 being the minimum supported
 resolution of 80x25)
- Added 'BITFADESECS' config file parameter for specifying the sleep interval in the Bit Fade test (Test 10)
- Added language support for Catalan
- Updated ImageUSB to version 1.3
- Fixed 128-byte alignment issues in the random library
- Errors detected in Test 12 (128-bit Random Number Sequence Test) are now logged as 128-bit values
- HTML test report now includes if ECC polling was enabled

- Fixed text artifacts appearing in the testing screen due to the text being too long
- Fixed memory size being incorrectly reported due to including non-RAM memory ranges (eg. NVM, MMIO, Reserved)
- Fixed main menu screen being too small due to resolution being set too high
- Added preliminary ECC Injection support for Intel Xeon E5 chipsets
- Added preliminary ECC Injection support for Intel D-1500 chipsets
- · Added ECC detection support for different variations of Intel Kaby Lake chipset
- Added support for retrieving AMD Ryzen CPU info, including base and turbo clock speeds
- Improved the performance and robustness of measuring CPU base/turbo speeds for AMD chipsets
- Updated JEDEC RAM manufacturer ID list
- Added reset mechanism for Intel ICH SMBus when timeout occurs while accessing SPD registers
- Fixed DDR4 SPD data not being read for PIIX4 SMBus controllers

Changes in v7.3 (February/2017)

- CPU cores that are identified as hyperthreads are now disabled by default, due to minimal performance benefits
- Fixed potential system hang caused by memory alignment issues when allocating 128-bit variables on the stack during the 128-bit random number sequence test (Test 12)
- Improved performance of the 128-bit random number sequence test (Test 12) by using SSE2 comparison intrinsics
- Improved performance of the row hammer test (Test 13) by increasing the default step size to 0x1000000 (16MB) for subsequent passes after the first pass. On the first pass, the default step size is 0x4000000 (64MB)
- Reduced test time of the row hammer test (Test 13) by using only a single offset bit to determine the row address pair, rather than cycle through all possible offset bits.
- Added 'ENABLEHT' config file parameter to enable/disable CPU cores identified as hyperthreads
- Added 'HAMMERSTEP' config file parameter to specify the step size for the next row pair to hammer in the row hammer test (Test 13). Increasing the step size reduces the memory test coverage, but will also decrease the test time. By default, the step size is 0x1000000 (16MB)
- Added several known baseboards to to a 'blacklist' of boards that have known issues when running in multiprocessor mode. If a blacklisted baseboard is detected, the Multiprocessor test is skipped during startup and the CPU selection mode is set to single.
- Fixed triggering of ECC error injection on Intel Skylake (Xeon E3 v5) chipset
- Added ECC detection and injection support for Intel KabyLake (Xeon E3 v6 family) chipsets
- Added ECC detection and injection support for Apollo Lake SoC (Atom E3900 Series) chipsets

- Added support for retrieving RAM SPD data on Intel Skylake-E chipsets
- Fixed issue with the test elapsed time having strange values when running in round robin or sequential CPU mode due to the timestamp counter not being synchronized on the CPU cores

Changes in v7.2 (December/2016)

Fixes/Enhancements

- Language support for Italian
- Added ECC detection support for Broadwell-H chipsets
- Added ECC injection support for Broadwell-H chipsets
- Added ECC detection support for AMD Merlin Falcon
- Added fix for certain Intel Xeon E5 platforms that are unable to access the ECC and SMBus registers
- TSOD polling is now temporarily disabled on Intel E5 v3 platforms when reading SPD bytes. Previously, this caused invalid bytes to appear in the SPD data.
- Added sanity check for invalid characters in the SPD part number string
- Updated JEDEC ID manufacture names
- Fixed crash when the number of processors is greater than the max supported (120)
- Added SMBIOS system, baseboard and BIOS info to MemTest86 reports
- Reduced the number of decimal points when displaying memory/cache speeds
- Added workaround for certain UEFI firmware when setting console resolution
- Report file name is now prepended with the baseboard serial number when running MemTest86 Site
 Edition in order to distinguish from reports from other machines
- Added "Mac-F42C88C8" to a blacklist of known unsupported baseboard/EFI firmwares. When a
 blacklisted baseboard/EFI firmware is detected, a warning message is displayed.
- Updated to latest UDK + compiler tools
- Various system info related updates/fixes (CPU)

Changes in v7.1 (August/2016)

- Fixed a bug in measuring CPU clock speed using HPET which could skew the clock speed results to unreasonable values. This may have caused issues during startup including extremely long loading times.
- Added fallback mechanism to use the legacy PIT to measure the clock speed if the measured CPU clock speed using HPET is unreasonable.
- Disabled code optimization for Test 12 due to reported freeze when running in parallel mode
- Fixed CPU selection mode not being set according to the results of the multiprocessor test during

startup

- When switching to the next target CPU in Sequential/Round Robin mode, attempt to reset the target CPU if there was a failed attempt to switch the BSP.
- When looking for SMBus devices for RAM SPD retrieval, attempt to look for any disabled SMBus devices to enable before enumerating the PCI bus
- When enabling SSE instructions on processors, dispatch to each processor separately rather than all at once.
- Fixed cursor appearing for some systems during testing

Changes in v7.0 (July/2016)

New Features

- Row Hammer Test (Test 13) now uses double-sided hammering and random data patterns in an attempt to expose more RAM modules susceptible to disturbance errors.
- PXE network boot is now fully supported (MemTest86 Site Edition only) to support scalable, diskless deployment to PXE-enabled clients. Like the Pro version, the configuration file (acquired from the PXE server via TFTP) can be used for customization and configuration of MemTest86 memory tests. Report files can also be uploaded to the server. Logging, however, is unavailable.
- Memory tests are run in Parallel CPU mode by default, if supported by the UEFI firmware. Running in
 parallel mode significantly decreases the test time as compared to running in single CPU mode and
 should also help to detect more errors faster. This was made possible after developing a work around
 for UEFI BIOS bug that prevented multi-threading on some machines.
- Added 'HAMMERPAT' config file parameter to specify the data pattern to use for the row hammer test. By default, random data patterns are used.
- Added 'HAMMERMODE' config file parameter to specify whether to use single or double sided hammering. By default, double-sided hammering is used.
- Added 'CPULIST' config file parameter to specify a subset of available CPUs to enable for the memory tests.
- Added 'DISABLEMP' config file parameter to disable multiprocessor support in MemTest86. This can be
 used as a workaround for certain UEFI firmwares that have issues running MemTest86 in multi-CPU
 modes.
- Added 'BGCOLOR' config file parameter to specify the background colour to use
- Added Portuguese translations
- Added Czech translations

- Added ECC support for different revisions of Intel Skylake memory controllers
- Fixed ECC detection on Intel Broadwell-H chipsets

- Changed how ECC errors are detected on Broadwell chipsets
- Changed how ECC errors are detected on Atom C2000 chipset
- Fixed incorrect channel/slot number being reported for ECC errors on E5 chipsets
- Added SMBUS (SPD) support for Intel Broxton
- Added SMBUS (SPD) support for Intel Airmont
- · Added SMBUS (SPD) support for Intel Sunrise Point-LP
- · Reduced the number of iterations for the Modulo 20 Test (Test 9) to decrease the test time
- Reduced the number of addresses to be hammered for the Row hammer Test (Test 13) to decrease the test time
- When no tests are completed, the test report now displays "N/A" as oppose to "PASS"
- The High Precision Event Timer (HPET) is now used to measure the clock speed, if available. Otherwise, the older Programmable Interval Timer (PIT) is used.
- The clock speed displayed in the RAM info is now the effective clock speed as opposed to the actual clock speed. The effective clock speed is twice the actual clock speed for DDR RAM.
- Speeds greater than 10000MB/s are converted to GB/s when displaying memory/cache speeds in the test screen
- Memory sizes greater than 10240MB are now displayed in GB
- Console is no longer forced to 80 x 25 if the current mode has a higher resolution
- Fixed issue with certain UEFI firmware when switching from console to graphics mode
- Fixed RAM benchmark chart title string overflow
- Various system info related updates/fixes (CPU)

Changes in v6.3.0 (Jan/2016)

New Features

- New configuration file parameters MINSPDS, SPDMANUF and SPDPARTNO to specify the values that the RAM SPD must match before allowing the tests to start. This may be useful for RAM manufacturers that need to verify that the SPD data has been programmed correctly.
- New configuration file parameter SKIPSPLASH to skip the 10 second splashscreen and proceed directly to the main menu
- New mode for the configuration file parameter AUTOMODE to specify that MemTest86 shall run the
 tests immediately (skipping the splashscreen and main menu) but prompt the user to save the results
 after test completion
- New configuration file parameters ADDR2SLBITS and ADDR2CSBITS to specify the bit positions of a memory address to exclusive-or (XOR) to determine which DIMM slot/chip select (0 or 1) corresponds to the failure address

- Added ECC detection support for Broadwell-H chipset
- Added ECC detection support for Broadwell-DE chipset
- Added ECC detection support for AMD Bald Eagle (2nd generation Embedded R-series)
- Added ECC injection support for AMD Steppe Eagle/Bald Eagle
- Added SMBus (SPD) support for Broadwell-DE
- Fixed decoding of JEDEC manufacture names from the SPD
- DDR3 XMP rev1.3 SPD decoding is now supported
- Fixed retrieval of DDR4 SPD bytes for Intel ICH SMBUS
- Added workaround for buggy firmware when calls to EFI MPServices fail
- Fixed MemTest86 freezing on network boot
- Fixed bug with wrong details being displayed for detected memory warnings in the report file
- Fixed bug with CPU type detection for older CPUs
- Fixed benchmark chart not being displayed after running a RAM benchmark test when there is a failure in saving results to disk
- Report file now includes the RAM serial number, if available
- Various system info related updates/fixes (CPU)

Changes in v6.2.0 (Sept/2015)

New Features

- Due to the high number of failures reported for the Hammer Test (Test 13), the algorithm was revised to perform 2 potential passes:
 - 1. Row pairs are hammered at the maximum hammer rate. (ie. no delays between each row pair hammer)
 - 2. Row pairs are hammered at a lower hammer rate (200K per 64ms, as determined by memory vendors as the worst case scenario)
 - If memory errors are detected in the first pass, error details are not immediately displayed to the user and the second pass is started. If errors are detected in the second pass, they are reported as normal.
 - If errors are detected in the first pass but not the second pass, a warning of potential high frequency bit flips is displayed to the user.
 - The premise behind this revision is to better inform users of the significance of errors detected in the Hammer Test, as opposed to a strict PASS/FAIL result. Although errors detected in this test are real errors, the conditions needed to induce these errors occur only very rarely in normal PC usage, and should not be of concern to most users. Therefore, a warning rather than an outright failure would ensure the user is aware of the issue and be able to take the necessary measures to mitigate the issue.
- The details of the errors that were detected in the first pass of the Hammer Test but not during the

second pass can be displayed in the report by specifying the configuration file parameter 'REPORTNUMWARN'. This parameter represents the maximum number of warnings to display in the report file.

- New configuration file parameter 'AUTOMODE' for full automation. Enabling this parameter shall result in the following:
 - 1. Splash screen is skipped and the tests are started immediately
 - 2. When the tests are completed, the report is saved to disk automatically
 - 3. System is rebooted

Fixes/Enhancements

- Shortened the test time for Hammer Test (Test 13) by reducing the total number of hammers per row address pair
- Fixed issue with the main menu not displaying for certain EFI firmware. Due to the fact that many EFI firmwares require the use of the obsolete ConsoleControl protocol to switch between graphics/console mode, the graphics/console mode workaround is now enabled by default.
- Fixed bug with details of empty RAM slots being displayed when using SMBIOS memory device information
- Added Intel Skylake ECC support
- Updated Jedec manufacturer ID list for displaying the vendor name from RAM SPD. Fixed Jedec manufacturer ID lookup function to support > 7 continuation codes.
- Fixed AMD Hudson-2/Hudson-3 SMBus support to include various hardware revisions
- Various system info related updates/fixes (SPD, CPU)

Changes in v6.1.0 (June/2015)

New Features

- New config file parameter REPORTNUMERRS for specifying the maximum number of errors to include in the report
- Language support for Spanish
- RAM details obtained from SMBIOS are now displayed if SPD information cannot be accessed

- Added ECC detection support for Intel Atom C2000 SoC chipset
- Added ECC injection support for Intel Atom C2000 SoC chipset
- Added ECC injection support for Intel Xeon E3 (Sandy Bridge/Ivy Bridge) chipset (untested)
- Added SMBus (SPD) support for Intel 5100 chipset
- Added SMBus (SPD) support for Intel Wildcat Point chipset
- Added SMBus (SPD) support for Intel Sunrise Point chipset

- · Improved speed of retrieving SPD data
- Fixed potential issue with retrieving DDR4 SPD due to the bank address not being restored back to its
 original value
- Fixed decoding of ECC support in DDR2 SPD
- Added support for more precise timings supported by DDR3 rev 1.1 and later
- Fixed bug with retrieving SPD details for a large number of RAM modules (ie. > 16)
- Fixed the progress indicator for Test 13 (Row hammer test) to be more linear
- Reduced the test time for Test 13 (Row hammer test)
- Fixed the displayed error details when ECC errors are detected
- Fixed freeze while initializing the screen for some firmwares due to an unsupported driver protocol
- Added workaround for incorrect text length/height returned by the UEFI firmware
- Added checks for the number of cores exceeding the maximum supported in MemTest86
- Synchronized cache enabling/disabling across all CPUs
- Migrated CPU cache info code from PerformanceTest/BurnIn Test. The displayed cache info should now be more consistent with what is displayed in BurnIn Test/Performance Test.
- Fixed Enabling/Disabling of features in the Sys Info screen to be less confusing
- Fixed CPU Selection screen to truncate the list of available processors when more than 16 are available
- Various system info related updates/fixes (CPU)

Changes in v6.0.0 (Feb/2015)

New Features

- Support for DDR4 RAM (and associated hardware), including retrieval and reporting of DDR4-specific
 SPD details. This includes DDR4 RAM that support Intel XMP 2.0 DDR4 RAM timings.
- New RAM benchmarking feature allowing results to be graphed and saved to disk. Previous results can be graphed on the same chart for comparison.
- New "Hammer Test" for detecting disturbance errors caused by charge leakage when repeatedly accessing addresses in the same memory bank but different rows in a short period of time.
- Language support for French/German/Japanese/Chinese. All text are displayed in the selected language, including generated reports.

- Added Haswell-E (DDR4) ECC support
- Added Xeon E5 v3 ECC support
- Added Ivy Bridge (non-Xeon) ECC support
- Added AMD Steppe Eagle ECC support
- Added Intel Atom E3800 SoC ECC support

- Fixed ECC detection for Ivy Bridge-EX/Haswell-EX chipsets that have a 2nd memory controller
- Fixed Intel5400 ECC registers not being reset after starting test
- Fixed ECC errors immediately being reported after starting test (Ivy Bridge-E)
- Added support for ECC injection for Intel Xeon E3 v3 (untested)
- Fixed handling of Intel ICH SMBUS built-in hardware semaphore to prevent SMBus device contention
- Fixed possible crash when DDR3 module type value in the RAM SPD info is invalid
- Fixed DDR4 SPD clock speed rounding errors in the RAM SPD info
- Fixed DDR3 SPD Register manufacturer/type in the RAM SPD info not appearing correctly
- CPU speed measurement is now more robust by taking multiple samples
- Fixed Intel turbo clock speed calculation
- Fixed detection of Intel turbo support for Xeon chipsets
- Increased maximum # of supported CPUs to 72
- · Increased maximum # of supported RAM modules to 64
- Increased the number of supported memory controllers to 8
- New config file parameter 'ECCINJECT' for specifying whether to enable/disable ECC injection
- New config file parameter 'MEMCACHE' for specifying whether to enable/disable memory caching
- New config file parameter 'PASS1FULL' for specifying whether the first pass should run the full iteration or reduced iteration
- New config file parameter 'ADDR2CHBITS' to specify the address bits to XOR to determine the memory channel
- New config file parameter 'LANG' for specifying language to use on startup
- Console resolution is now forced to 80 x 25
- Graphics resolution is now set to a minimum of 1024 x 768
- Updated ImageUSB to v1.1.1015 which includes an option to zero the USB drive
- Running memory tests in parallel mode is now more robust for UEFI BIOS that exhibit inconsistent multiprocessor behaviour
- Fixed detection of the number of enabled processors for UEFI BIOS that exhibit inconsistent multiprocessor behaviour
- · Fixed test status screen not being displayed correctly for consoles with small/large screen widths
- In the RAM SPD menu screen, PGUP/PGDN can be used to navigate between pages of RAM modules
- For specific cases where files under EFI\BOOT cannot be accessed (eg. grub2), log/report files shall be written to the root directory
- During MemTest86 boot-up, the system memory map is now written to log file
- Various optimizations of the size of the MemTest86 binary
- Forced a memory address limit of 32-bits when running under 32-bit UEFI
- Memory ranges to be tested are now allocated at the beginning of each test (due to the possibility that

- the memory map changes in the middle of testing)
- Reduced the number of log messages written when waiting for other processors to finish when running in parallel mode
- When allocating memory for Bit Fade Test, leave 1MB of free memory available (to prevent firmware drivers from running out of memory)
- · Fixed potential crash or other unexpected behaviour due to memory issues with random functions
- Reports are now saved using UTF16 encoding to support Unicode characters
- Changed memory allocation behaviour by only pre-allocating memory segments >= 16MB to prevent memory starvation
- When mapping memory layout, removed several limits reducing the memory space tested
- Fixed memory being allocated after memory layout has been mapped (thus changing the memory layout)
- Fixed memory leak when cleaning up after test completion
- Fixed memory leak when decoding PNG files
- Fixed progress bar not displaying 0% on completion of a pass
- Updated to new UEFI SDK libraries (UDK2014)
- Fixed memtest86v4 incorrectly booting to serial mode by default
- Various system info related updates/fixes (SPD, CPU)

Enhancements in v5.1.0 (May/2014)

- Fixed ECC error detection for Ivy Bridge-E chipsets
- Fixed rounding of memory SPD timings
- On 32-bit systems, systems with upper address limit > 32-bits freezing during testing is now fixed
- Locking memory for testing is now more robust
- Added SPD support for VT8237S, Intel X79, Intel NM10 Chipsets
- Fixed incorrect decoding of # of banks in DDR2 FB SPD causing the memory stick size to be reported incorrectly
- Increased the number of supported memory modules from 16 to 32
- Increased the maximum number of SMBus controllers to 8
- DDR3 revision 1.3 SPD decoding now supported
- Fixed SMBUS CLK issues when retrieving SPD details for Intel chipsets
- CPU spec updates, AMD Kaveri + Intel Haswell refresh
- Xeon (Ivy Bridge and later) non-Turbo CPU speeds now recorded.
- Minor temperature reporting changes for AMD Family 15h, Models 0h-0Fh and 30h-3Fh (e.g. A10-7850K)
- Fixed "Pass" progress bar so that it shows 100% on completion of one pass

- A notification text is now displayed when ECC errors are injected
- Improved notificaion text displayed when ECC errors are detected
- Updated MemTest86 BIOS version to 4.3.7

New features in v5.0.0 (Dec/2013)

- · Completely re-written to work under UEFI.
- Native 64-bit support
- No longer requires the use of the PAE workaround to access more than 4GB of memory. (PAE = Physical Address Extension)
- Mouse support, where supported by the underlying UEFI system. On older systems a keyboard is still required.
- Improved USB keyboard support. The keyboard now works on systems that fail to emulate IO Port 64/60 correctly. So Mac USB keyboards are now supported.
- Improved multi-threading support, where supported by the underlying UEFI system.
- Dual boot with Memtest version 4 for supporting older systems without UEFI. So with a single USB or
 CD drive both UEFI systems and BIOS systems can be supported.
- Reporting of detailed RAM SPD information. Timings, clock speeds, vendor names and much more.
- Support to writing to the USB drive that Memtest is running from for logging and report generation. In all prior MemTest releases there was no disk support.
- Use of GPT. (GUID Partition Table)
- ECC RAM support (limited hardware support, ongoing development)
 - Detection of ECC support in both the RAM and memory controller
 - Polling for ECC errors
 - Injection of ECC errors for test purposes. (limited hardware only)
- Option to disable CPU caching for all tests
- Support for reading parameters from a configuration file to allow settings to be pre-defined without the need for keyboard input. This can help with automation.
- Support for Secure Boot
- Speed improvements of between 10% and 30%+. Especially for tests, #5, #8 & #9. This is the result more moving to native 64bit code, removing the PAE paging hack, switching compilers and using faster random number generation algorithms.
- Addition of 2 new memory tests to take advantage of 64bit data and SIMD instructions.

Enhancements in v4.3.7 (May/2014)

• Fixed freeze (particularly for older machines) caused by incorrect handling of RSDP revision 0 in the multiprocessor detection code.

Added menu option for enabling serial console mode.

Enhancements in v4.3.6 (Nov/2013)

- Fixed crash (particularly for AMD machines) that is seemingly resolved by adding CPU synchronication barriers before and after performing the memory speed test
- Fixed an error in setting the barrier structure's base address, preventing a possible crash or freeze of the system.
- Added a check to perform a spin lock only when more than 1 CPUs are detected

Enhancements in v4.3.5 (Oct/2013)

- Fixed potential error due to barrier structure located at fixed memory location
- Fixed block move test freeze on higher memory addresses

Enhancements in v4.3.4 (Oct/2013)

- Fixed incorrect progress calculation for test 0
- Fixed incorrect memory size due to bug with memory map when the e820 entry size member is 0
- · Fixed incorrect number of CPU's found due to duplicate entries in the MADT
- Changed the method used to search for processors to searching the APIC MADT first, then search the MP spec table (as opposed to vice versa). The MP spec table has largely been deprecated.

Enhancements in v4.3.3 (Sept/2013)

- Fixed incorrect progress calculation for test 4
- Fixed potential false positives in parallel mode caused by overlapped/unaligned memory chunk allocations per CPU
- Fixed program freeze when selecting test 0 or 1 when running in non-parallel mode

Enhancements in v4.3.2 (Aug/2013)

- Memory bandwidth is now measured for one CPU (as opposed to being a total for all CPUs & Cores).
 This will lower the reported bandwidth for multi-core machines. But we think it makes more sense this way.
- Fixed crash when attempting to boot on older single core machines with hyperthreading. Only effects old machines, from around the early Pentium 4 era, that didn't have a MP (Multi-Processor) Spec table defined but did have both a MADT (Multiple APIC Description Table) defined and hyperthreading enabled.
- · Restored the "Start only one CPU" boot option. This option should not be required in normal use, but

- might be useful for debugging purposes.
- · Updates to the included help file

Enhancements in v4.3.1 (Aug/2013)

- · Fixed bug with Test 6 (Block Move Test) not testing the end of a memory segment correctly
- Removed unnecessary boot options in menu

Enhancements in v4.3 (Jul/2013)

- Changed default CPU selection mode to round robin. Running all CPUs at once has been shown to cause false positives on a number of systems.
- Fixed a bug that could cause the program to go into a tight loop that could not be escaped when setting certain memory ranges to test.
- Fixed a bug displaying the memory location of individual errors. The values after the decimal point in the MB readout were incorrect.
- Fixed a bug in configuring upper and lower memory limits, previously lower limits equal or grater than 2gb would not work, as well as some other more obsucre configurations.
- Added a misc option to display the systems memory map.
- Fixed a bug that would cause the number of passes to not correctly reset after changing the selected tests.
- Added missing source code to some of the download packages.
- Fixed a bug in test 8 causing a single error to cascade into multiple errors.
- Fixed a bug causing the average error bits to be incorrect once the errors had maxed out at 65k
- Fixeda bug preventing test 10 to be selected as a single test to run.
- Fixed bug displaying individual test error counts.
- Fixed bug making overall errors 10x what they should be.

Enhancements in v4.2 (Mar/2013)

- Fixed issues with USB keyboards. The USB keyboard functionality is memory mapped into a portion of low memory on some (maybe many) machines, typing on a USB keyboard changes some values in RAM as the key presses are stored in memory as you type. This can cause the keyboard to become unresponsive during testing or input from the keyboard to generate errors in the tests.
- Fixed crash when configuring memory ranges. Changing the meory range during the first test, or changing the memory range multiple times during later tests could cause the current test number to become negative, triggering a crash.
- Fixed highest error address not reporting correctly on error.
- Fixed error counters overflowing and reseting to 0 after too many errors.

- · Fixed max contiguous error reporting.
- Cleaned up some UI text.
- The Windows USB package now includes ImageUSB to make creating Memtest86 USB drives easier.

Enhancements in v4.1 (Jan/2013)

- Added a new boot trace option that single steps through the testing process and displays messages and
 data that is valuable in diagnosing problems with test execution. A large number of trace points have
 been added in key portions of the code (in particular SMP startup routines) to provide visibility of
 obscure failures. This feature will allow non-technical users to provide troubleshooting data for better
 test stability.
- Added a new One Pass feature. This feature runs the complete test once and then exits, but only if
 there were no errors. This provides a convenient method for unattended testing. One Pass may be
 enabled via a boot option or via an on-line command.
- Images for CD, USB key and Floppy disks now use Syslinux for booting and include a variety of standard options and two previous versions of Memtest86. The new boot time options may be specified at the boot prompt.
- A feature has been added to allow customization of the list of tests to be run. The test list may be specified via a boot option or via an on-line command.
- A feature has been added to restrict specific CPUs that are to be used for testing. The maximum number of CPUs may be specified or a 32 bit CPU mask may be specified. These are enabled with boot options.
- A number of problem with use of on-line commands when testing with more than one CPU have been fixed.
- A selection of boot time parameters are were added. These options enable boot tracing, the One Pass
 feature, limit the maximum number of CPUs to use, specify a CPU mask to select CPUs to be used and
 setup serial console parameters.
- Improved and extended CPU identification routines. Newer CPUID based method is now used to determine cache sizes for Intel CPUs for better accuracy and supportability.
- Routines for calculating cache and memory speeds have been reworked for better accuracy. An
 overflow problem has been fixed that resulted in no memory speed being reported for CPUs with large
 L3 caches.
- Fixed some errors in the crash reporting routines.
- Misc minor fixes and code cleanup.

Enhancements in v4.0 (28/Mar/2011)

• Full support for testing with multiple CPUs. All tests except for #11 (Bit Fade) have been multithreaded. A maximum of 16 CPUs will be used for testing.

- CPU detection has been completely re-written to use the brand ID string rather than the cumbersome, difficult to maintain and often out of date CPUID family information. All new processors will now be correctly identified without requiring code support.
- All code related to controller identification, PCI and DMI has been removed.
- This may be a controversial decision and was not made lightly. The following are justifications for the decision:
 - 1. Controller identification has nothing to do with actual testing of memory, the core purpose of Memtest86.
 - This code needed to be updated with every new chipset. With the ever growing number of
 chipsets it is not possible to keep up with the changes. The result is that new chipsets were
 more often than not reported in-correctly. In the authors opinion incorrect information is worse
 than no information.
 - 3. Probing for chipset information carries the risk of making the program crash.
 - 4. The amount of code involved with controller identification was quite large, making support more difficult.
- Removing this code also had the unfortunate effect of removing reporting of correctable ECC errors.
 The code to support ECC was hopelessly intertwined the controller identification code. A fresh,
 streamlined implementation of ECC reporting is planned for a future release.
- A surprising number of conditions existed that potentially cause problems when testing more than 4 GB of memory. Most if not all of these conditions have been identified and corrected.
- A number of cases were corrected where not all of memory was being tested.
- For most tests the last word of each test block was not tested. In addition an error in the paging code was fixed that omitted from testing the last 256 bytes of each block above 2 GB.
- The information display has been simplified and a number of details that were not relevant to testing were removed.
- Memory speed reporting has been parallelized for more accurate reporting for multi channel memory controllers.
- This is a major re-write of the Memtest86 with a large number of minor bugfixes and substantial cleanup and re-organization of the code.

Enhancements in v3.5 (3/Jan/2008)

- Limited support for execution with multiple CPUs. CPUs are selected round-robin or sequential for each test.
- Support for additional chipsets. (from Memtest86+ v2.11).
- Additions and corrections for CPU detection including reporting of L3 cache.
- Reworked information display for better readability and new information.
- Abbreviated iterations for first pass.

- · Enhancements to memory sizing.
- · Misc fixes and code cleanup

Enhancements in v3.4 (8/Sep/2007)

- A new error summary display with error confidence analysis
- Display of memory module information (from Memtest86+ v1.70)
- Relocated testing reworked to overlap main testing for better error detection
- Support for additional chipsets. (from Memtest86+ v1.70)
- · Additions and corrections for CPU identification
- Misc bug fixes and code cleanup

Enhancements in v3.3 (12/Jan/2007)

- Added support for additional chipsets. (from Memtest86+ v1.60)
- Changed Modulo 20 test (#8) to use a more effective random pattern rather than simple ones and zeros.
- Fixed a bug that prevented testing of low memory.
- Added an advanced menu option to display SPD info (only for selected chipsets).
- Updated CPU detection for new CPUs and corrected some bugs.
- Reworked online command text for better clarity.
- Added a fix to correct a Badram pattern bug.

Appendix D. Acknowledgments

MemTest86 (UEFI) was developed by PassMark Software based on the original source code by Chris Brady.

Hammer Test was implemented based on the research work performed and documented in *Flipping Bits in Memory Without Accessing Them: An Experimental Study of DRAM Disturbance Errors* by Yoongu Kim et al.

Special thanks to Simula eX³ project for providing high-end ARM64 systems for testing MemTest86 for ARM.

Translation work performed by Freelancer members: *GauthierC* (French), *daufenbach* (German), *Kentaro Ide* (Japanese), *tomhu* (Chinese). Spanish translations provided by Gabriel Barrandeguy of GabakTech. Portuguese translations provided by Siael Carvalho. Czech translations provided by Michal Waclawik of ASUS Czech Service (ACZS). Italian translations provided by Stefano Ronchi. Catalan translations provided by Elvis Gallegos Trias. Russian translations provided by Victor Lutz. Polish translations provided by Stanisław Kępiński. Japanese and Chinese (Mandarin and Cantonese) translations provided by Nagisa.